


GLO-BALL C/W ZERO

Designed by Jasper Morrison, 2009


F3335009

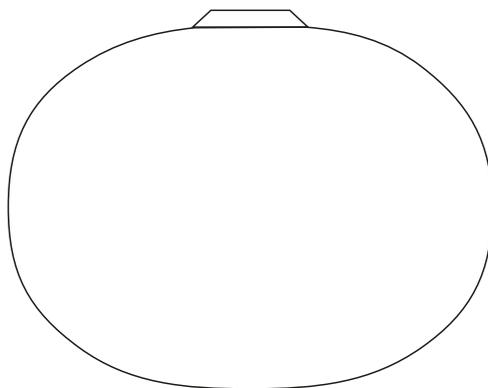

GLO-BALL C/W ZERO

F3335009

EN

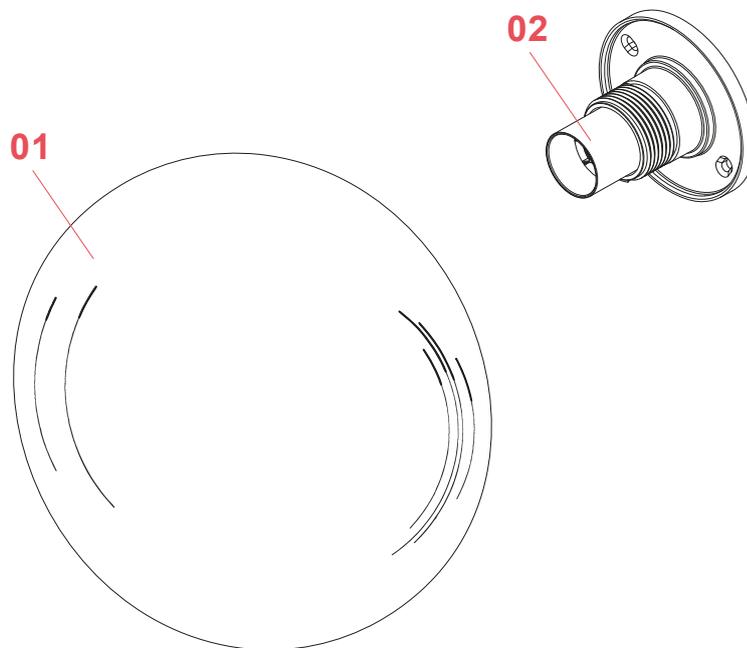

01. RF3335100 – Diffuser assembly

02. RF18844 – Lamp holder fitting E14

GLO-BALL C/W ZERO F3335009

EN

RF3335100

DIFFUSER ASSEMBLY



Glo-ball
Basic 0
p.03



Glo-ball
C/W zero
p.03

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

GLO-BALL C/W ZERO F3335009

EN

RF3335100

DIFFUSER ASSEMBLY

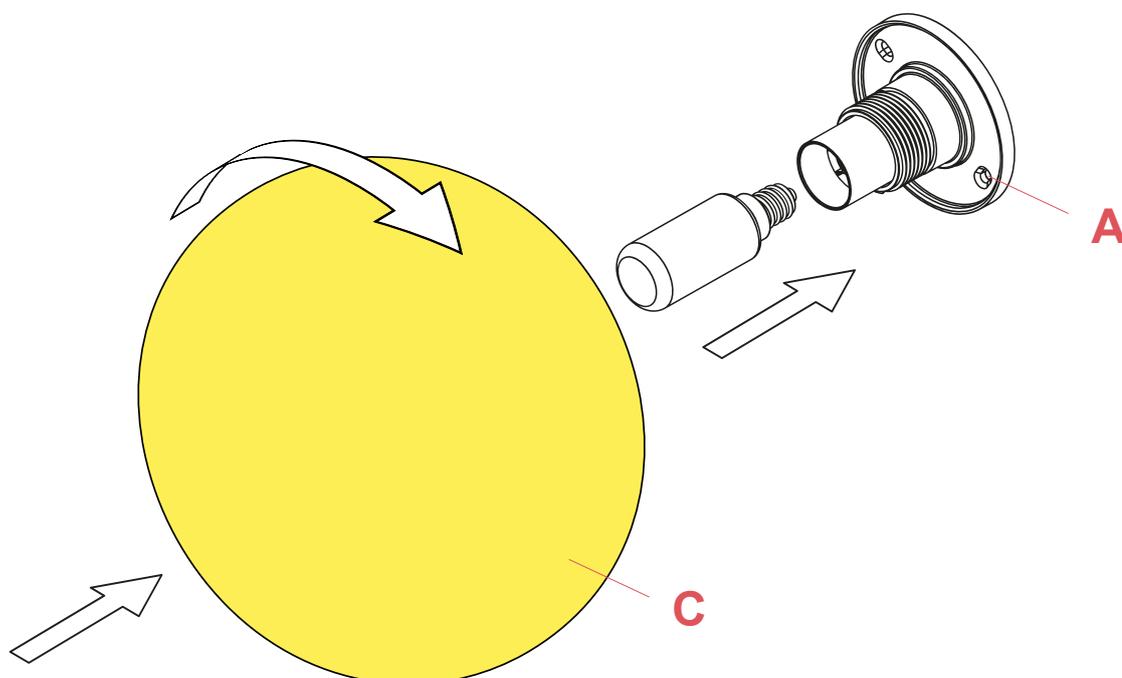


Fig.1

Insert the light bulb and screw the diffuser (C) onto the body (A).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

GLO-BALL C/W ZERO F3335009

EN

RF18844

LAMP HOLDER FITTING E14



Glo-ball
Basic 0
p.05



Glo-ball
C/W zero
p.05

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

GLO-BALL C/W ZERO F3335009

EN

RF18844

LAMP HOLDER FITTING E14

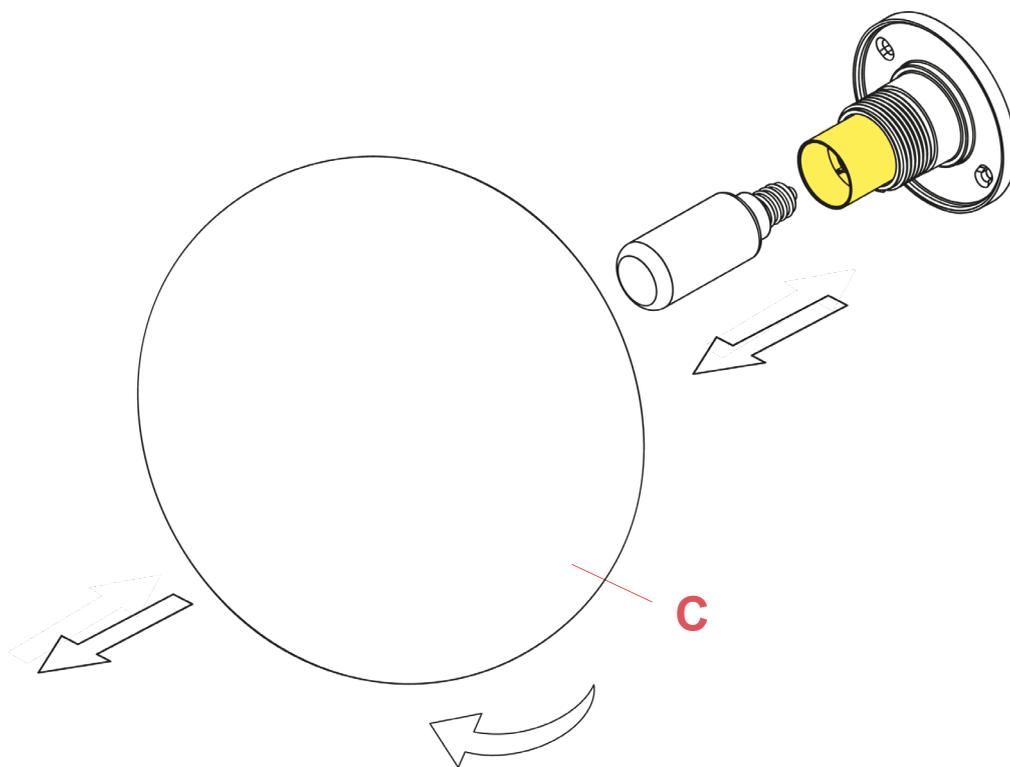


Fig.1

Remove the diffuser (C) and remove the lamp-bulb.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

RF18844

LAMP HOLDER FITTING E14

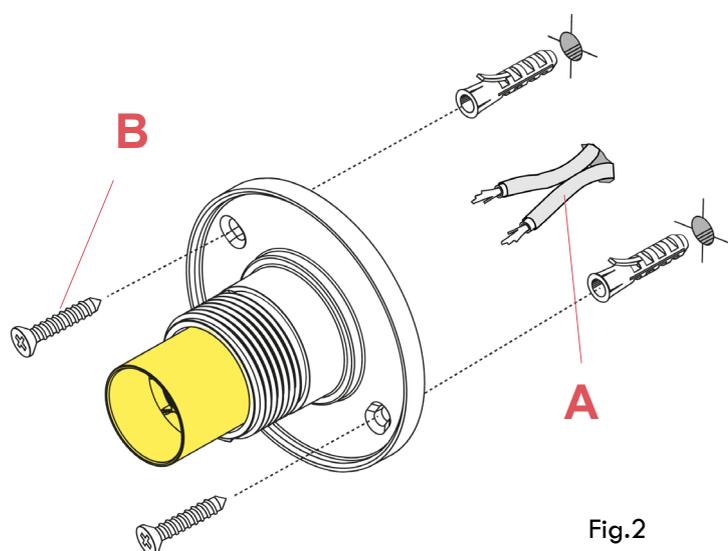


Fig.2

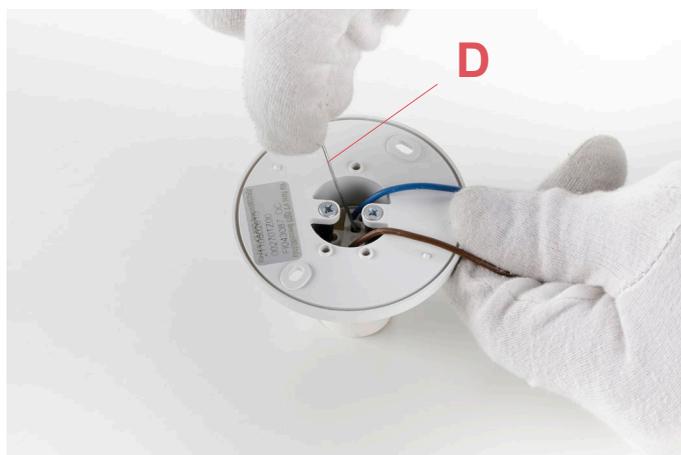


Fig.3

Unfasten the two fixing screws (B) and disconnect the electrical wires (A) from the lamp holder by pressing the push terminals with a paper clip (D) or something similar.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

RF18844

LAMP HOLDER FITTING E14



Fig.4



Fig.5

Unfasten the two lamp holder fixing screws (E) and remove from the assembly the lamp holder (F).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

GLO-BALL C/W ZERO F3335009

EN

RF18844

LAMP HOLDER FITTING E14



Fig.6



Fig.7

Assemble now the new spare-part:

Insert the two lamp holder fixing screws (E) (Fig.4 page 8) inside the two holes present on the lamp assembly.

Turn the assembly around with the lamp holder fixing screws and insert the two black spacers (G) inside the screws.

Insert the two lamp holder (F) (Fig.5 page 8). The holes present on the lamp holder must correspond with the screws on the lamp assembly.(Fig.7)

Turn the lamp assembly and fasten the two fixing screws (E) (Fig.4 page 8) of the lamp holder.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

RF18844

LAMP HOLDER FITTING E14

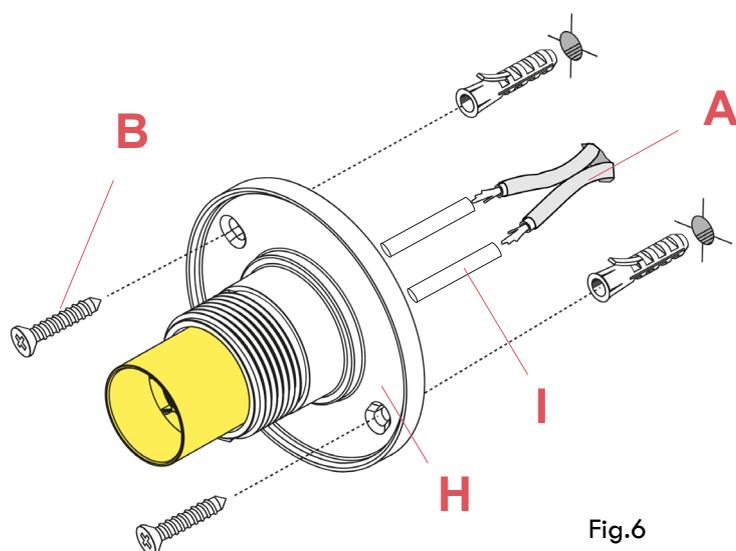


Fig.6

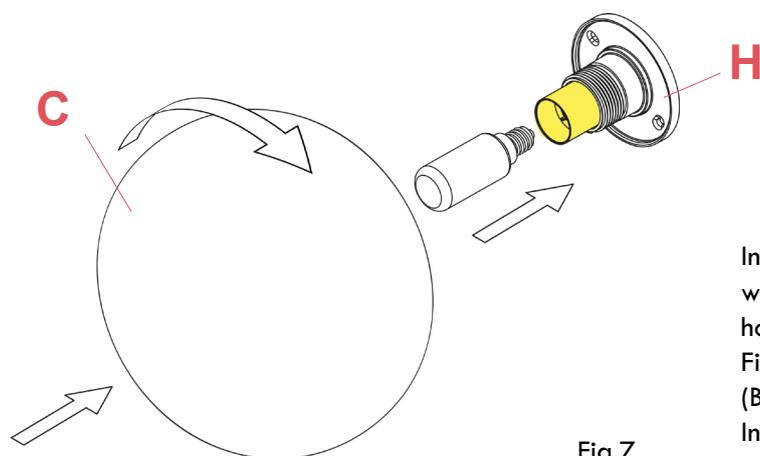


Fig.7

Insert the sheaths (I) in the power supply electrical wires (A). Connect the electrical wires to the lamp holder.

Fix the lamp assembly (H) by fastening the screws (B).

Insert the lamp bulb and screw the diffuser (C) to the lamp assembly (H).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.