


Designed by Sebastian Wrong, 2003


F6612021

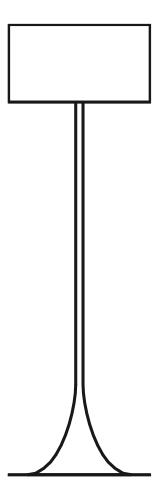



EN

F6612021

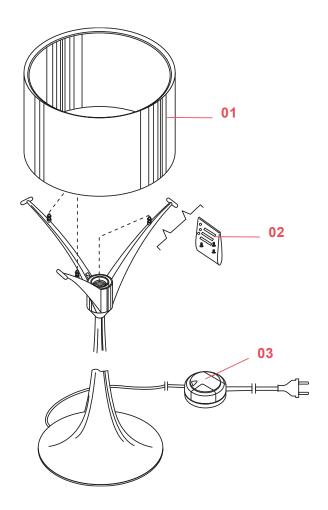

- 01. RF20316 F dark mud diffuser
- 02. RF6610100 Bag with diffuser supports and O-rings
- **03. RF28045** Black Rondò Dimmer LED 220/240V 40-250W 4-100W



EN

RF20316

F DARK MUD DIFFUSER



RF20316F DARK MUD DIFFUSER

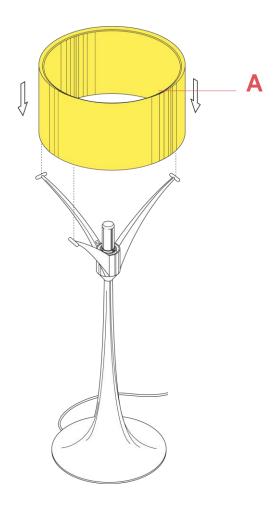


Fig.1

Place the diffuser (A) on the lamp body.


ΕN





ΕN

RF6610100

 BAG WITH DIFFUSER SUPPORTS AND O-RING

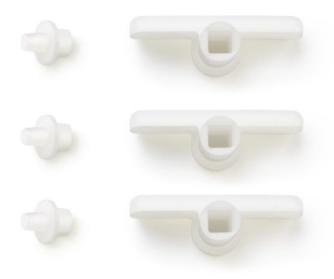

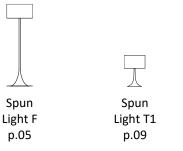



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

SPUN LIGHT F F6612021

RF6610100

BAG WITH DIFFUSER SUPPORTS AND O-RING

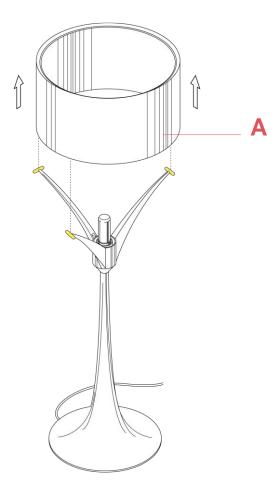


Fig.1

Remove delicately the diffuser (A) from the lamp body.

RF6610100

BAG WITH DIFFUSER SUPPORTS AND O-RING

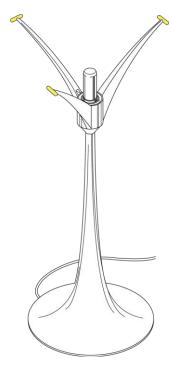


Fig.2

Collocate and insert the white rubber diffuser supports on the tips of the lamp spokes.

ΕN

RF6610100

BAG WITH DIFFUSER SUPPORTS AND O-RING

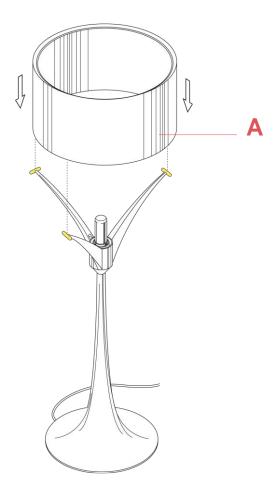


Fig.3

Place the diffuser (A) on the lamp body.

ΕN




SPUN LIGHT F F6612021

RF28045

LED RONDO' DIMMER 220/240V 40-250W 4-100W



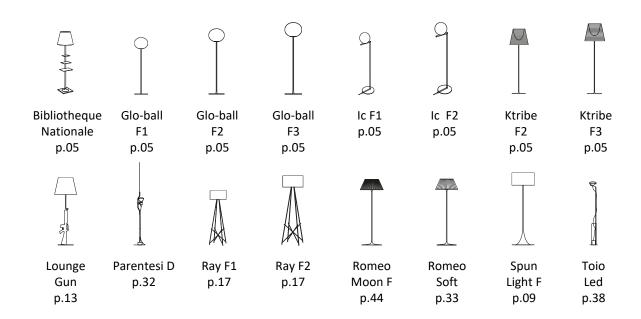

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

SPUN LIGHT F F6612021

RF28045

LED RONDO' DIMMER 220/240V 40-250W 4-100W



Fig.1



Fig.2

Open the box of the damaged dimmer.

For the opening, it is necessary to remove the rubber pad from underneath the dimmer box (refer to fig.1);

Unfasten the screw that locks the triangle terminal cover (refer to fig.2);

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

SPUN LIGHT F F6612021

RF28045

LED RONDO' DIMMER 220/240V 40-250W 4-100W



Fig.3



Fig.4

Turn the dimmer box and remove the terminal cover (refer to fig. 3);

Unfasten the three screws of the cable clamps (refer to fig. 4);

SPUN LIGHT F F6612021

RF28045

LED RONDO' DIMMER 220/240V 40-250W 4-100W



Fig.5



Fig.6

Remove the cable clamp (refer to fig. 5) and disconnect the cables from the green terminal box (refer to fig. 6).

Assemble now the new dimmer:

Connect the cables respecting the polarities, lock the wires by positioning the cable clamp and then fasten the three screws, cover the green terminal box with the triangle cover, turn the dimmer box, fasten the screw and stick-on the rubber pads.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.