 
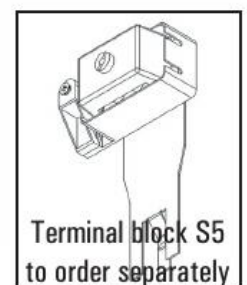 
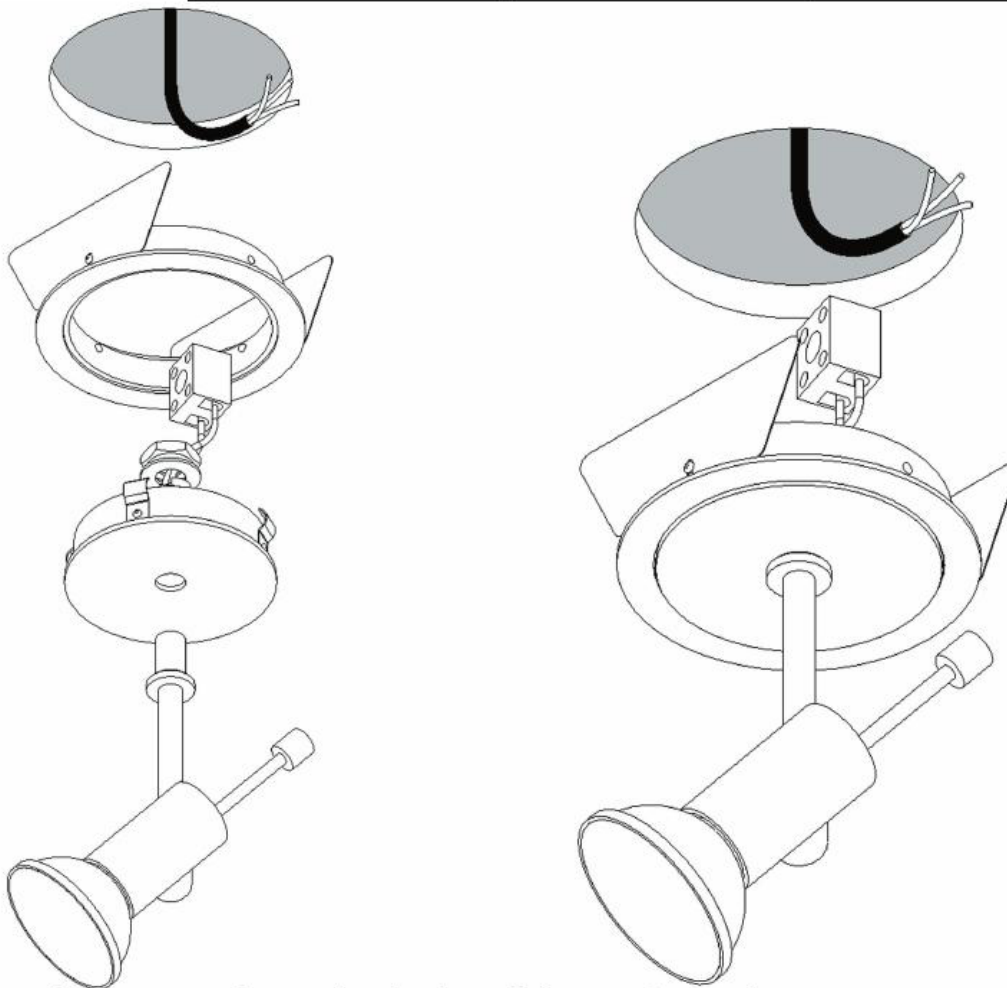 


caszenoc/..
to combine with spot or pendant

SPOT NOT INCLUDED

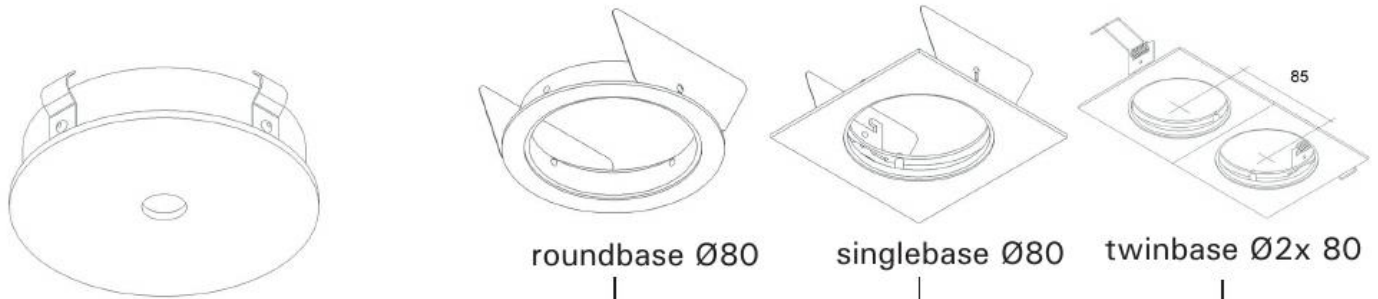

Installation and maintenance instructions in view of the manufacturer's guarantee.

- * The connection and testing of the devices should always be performed by a recognised electrician following the official instruction guides for electrical installations.
- * Ascertain which protective class applies and abide by the following provisions:
Protective class III : only suited for downlights at very low voltage (below 50 V AC).
- * The electro technician is responsible to use ballasts, transformers, ... which meet the valid CE and EMC rules.
- * All insulation placed in the ceiling spaces to be removed up to a distance of 50 mm of the downlights.
- * The downlight must never be covered by insulating or similar material.
The minimum distance between the light and the flammable material must be respected at all times.
- * Wait until the plaster is completely dried out before installing the downlights.

- * Before replacing the lamp, the power must be disconnected.
The stipulated lamp must be used.
(Max. - W) Use only lights of the correct type and never exceed the maximum listed Wattage.