

DIMENSIONS











Driver must be powered off before connecting cables.


Before connecting the luminaire/LED module to the driver please make sure the driver is not powered but disconnected from the mains. The driver can only be powered when the luminaire/LED module is already connected. Disregarding this instruction might damage or even destroy the luminaire/LED module.




MOUNTING INSTRUCTION

- Make a hole in the wall according to the prescribed dimensions of the fixture or the recessed housing.
- 2 POWER CONNECTION

Connect to 220-240V. Always use a driver according to the specifications of the LED module.

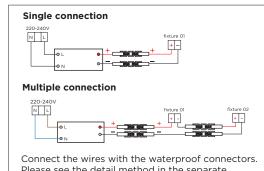

Connect the wires with the waterproof connectors. Please see the detail method in the separate instruction sheet of waterproof connection. Make sure to use a waterproof connection with the same IP rating as the luminaire.

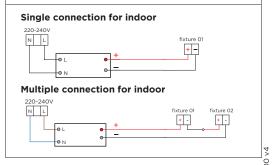





- $\ensuremath{\mathsf{A}}$ Insert the fixture in the hole.
- B Insert the fixture in the plasterkit.
- C Insert the fixture in the concrete housing.



INSTALLATION INSTRUCTIONS | AUGUST 2022

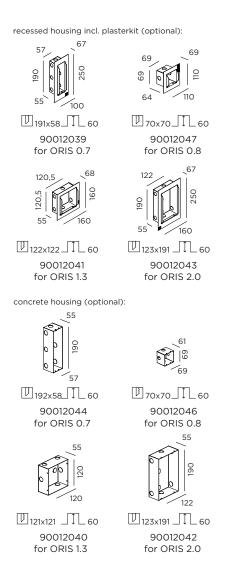

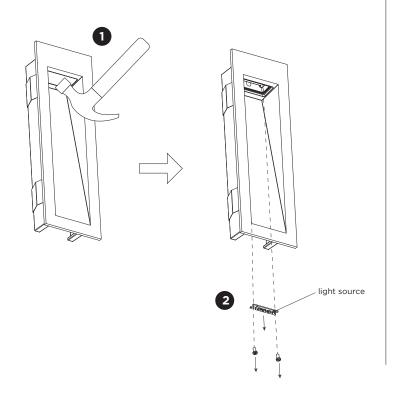

DISMOUNTING INSTRUCTIONS Light source

- Break the lens.
- Unscrew the light source, disconnect the wires and remove it.



The light source is not replaceable.



This luminaire contains a light source with the energy class G.