
ΕN






ΕN

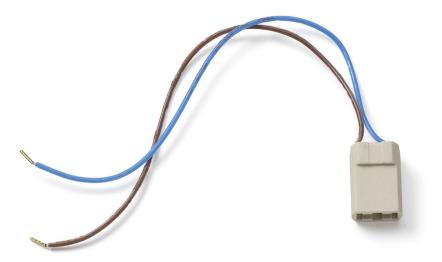

G9 Lamp Holder

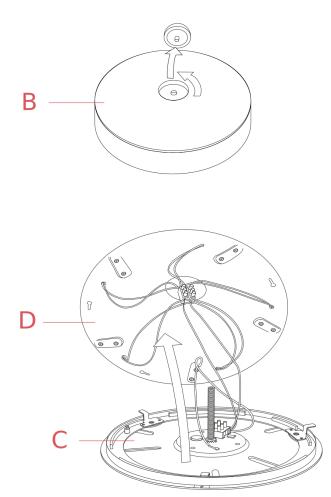




Unscrew the frieze (A) and remove the glass diffuser (B); Separate the wall mounting (C) from the lamp body (D).

EΝ

RF15709

G9 Lamp Holder

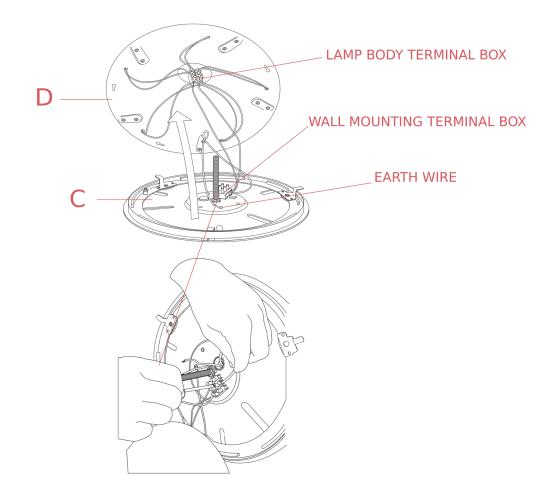



Disconnect the main power supply electrical wires (electrical wires that come-out from the clients wall or ceiling) from the wall mounting (C) terminal box;


Disconnect the earth wire on the wall mounting C) by unfastening the screw;

Disconnect from the terminal box present on the wall mounting the wires that go to the other terminal box present on the lamp body (D).

ΕN



G9 Lamp Holder

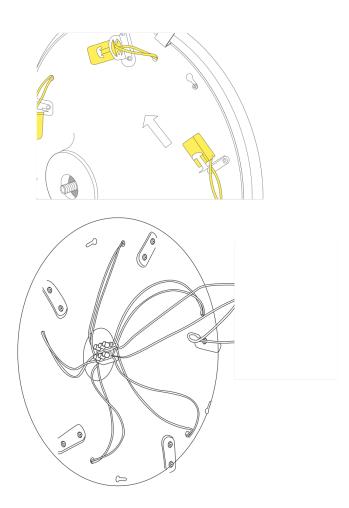



Point-out the wires of the damaged lamp holder and disconnect the wires from the terminal box; Remove the lamp holder with wires by slipping the wires out from the hole. Replace the G9 fitting lamp holder.