

OPTIONAL snoot dimensions 90019004




OPTIONAL groundspike dimensions 90013106

 



WEVER & DUCRÉ

1



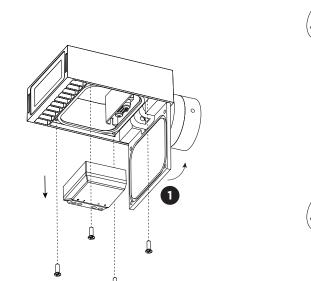



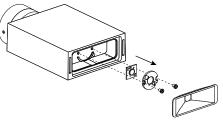

DISMOUNTING INSTRUCTION Light source & driver

Loosen the screws and tilt the cover.

The driver can be removed by loosening the cables.

3 Break the glass.

2

(4)

Take out the reflector and unscrew the LED.



The light source is not replaceable.



The driver can be replaced by the end user.

A ↑ G F

This luminaire contains a light source with the energy class F.