ΕN

RF1800044


Coordinates F Body



EΝ

RF1800044

Coordinates F Body

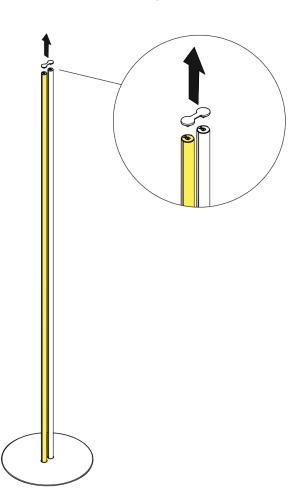




Remove the fixing kit assembly from the body.

EN



Coordinates F Body

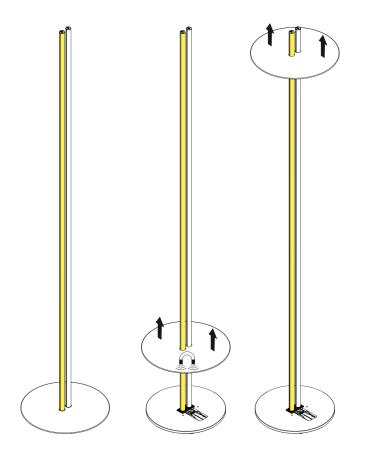




Remove the base upper cover.

EΝ

RF1800044

Coordinates F Body

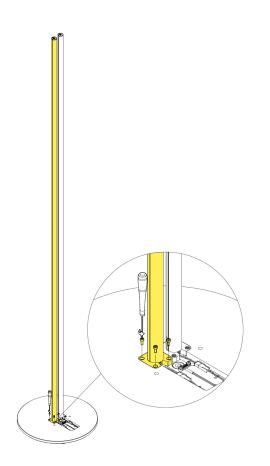




Unfasten the n°4 screws.

EN

RF1800044

Coordinates F Body

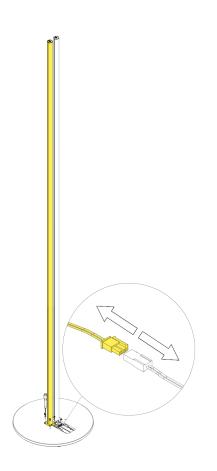



Disconnect the pins.

ΕN

RF1800044

Coordinates F Body



Remove the damaged body and block assembly. Assemble now the new spare parts. Position the new body and block assembly (Fig.5). Connect the pin (Fig.4 page.9) Fast the n°4 screws (Fig.3 page 8) Connect the base upper cover (Fig.2 page 7) Put the fixing kit assembly on the body (Fig.1 page 6).