


Mechanical connection Geometry

13750000


1 CUT OUT TEMPLATES ON INDICATED DASHED LINE

TEMPLATE IS NOT INCLUDED WITH SPRINGS, ONLY INCLUDED IN GEOMETRY PACKAGING

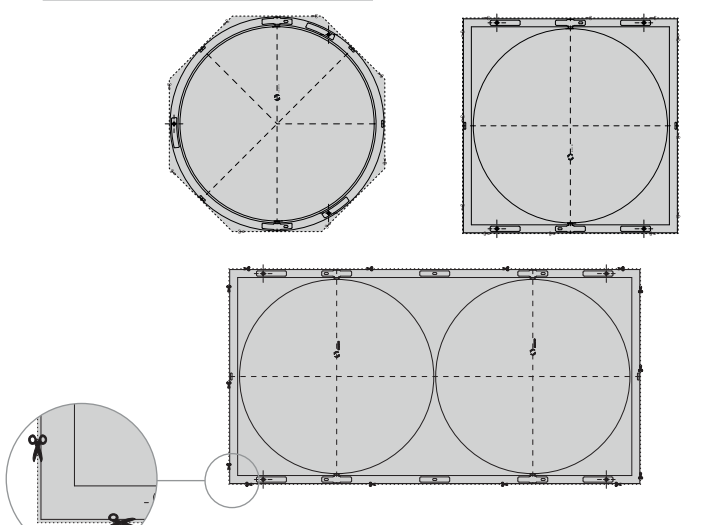

2 ALIGN TEMPLATES TO MAKE DESIRED COMBINATION


SHOWED COMBINATIONS FOR EXAMPLE PURPOSE ONLY

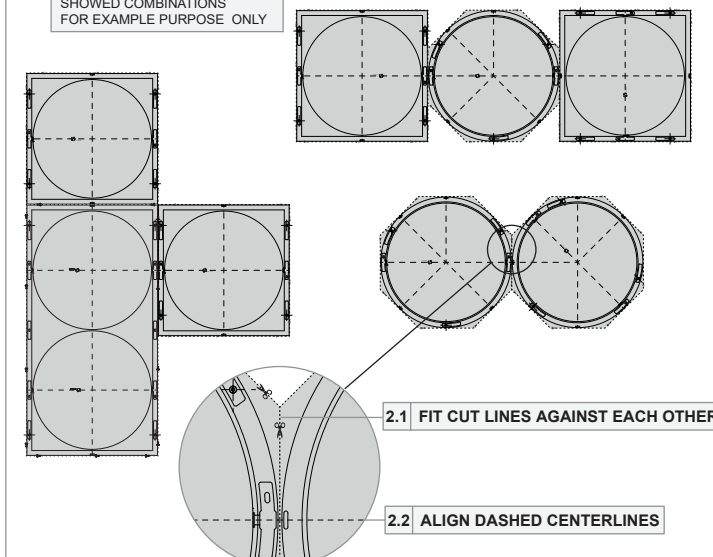

2.1 FIT CUT LINES AGAINST EACH OTHER


2.2 ALIGN DASHED CENTERLINES

3 TAPE COMBINED TEMPLATES TO CEILING AND MARK ALL SUSPENSION POSITIONS

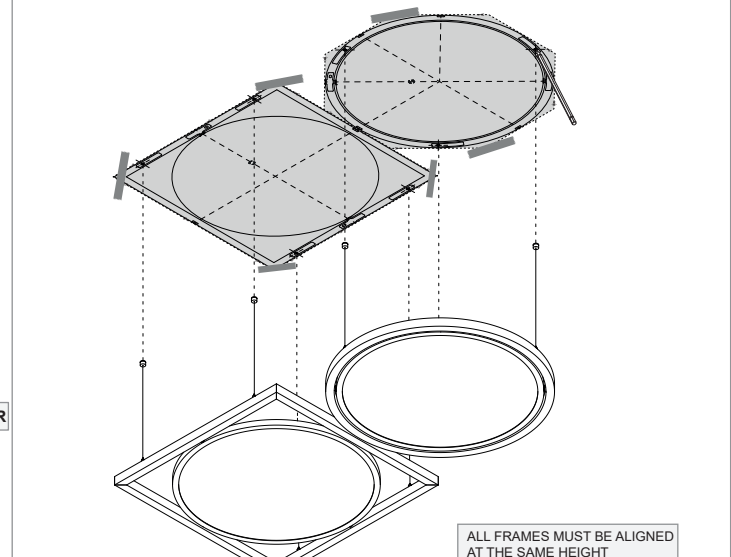

ALL FRAMES MUST BE ALIGNED AT THE SAME HEIGHT


4 MOUNT SPRING IN RECESSED ZONE OF BOTH FRAMES

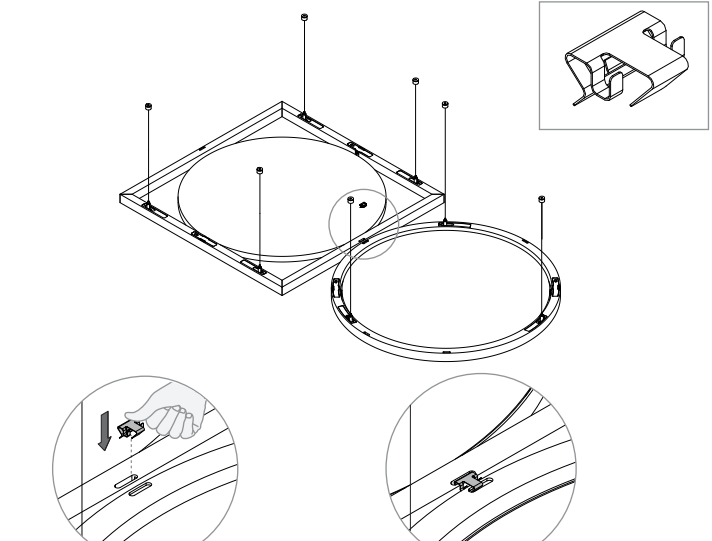

4.1 PUSH IN SPRING

4.2 MOUNTED SPRING

5 COMBINED FRAMES ALWAYS HAVE A 5mm GAP

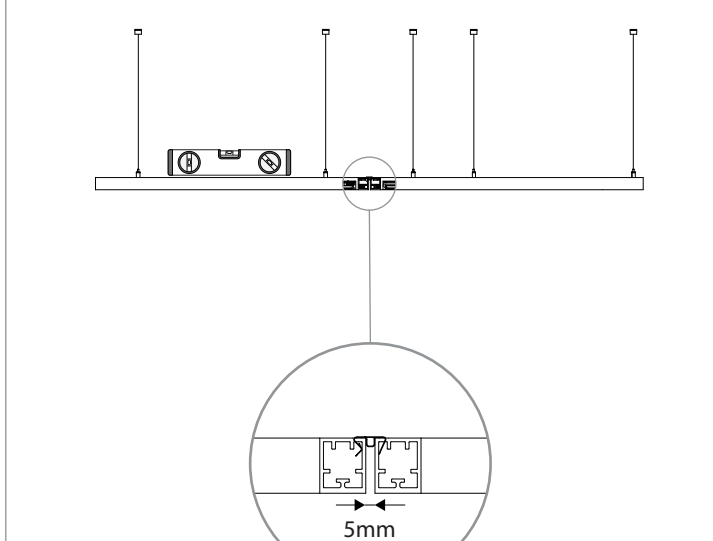

5mm

6

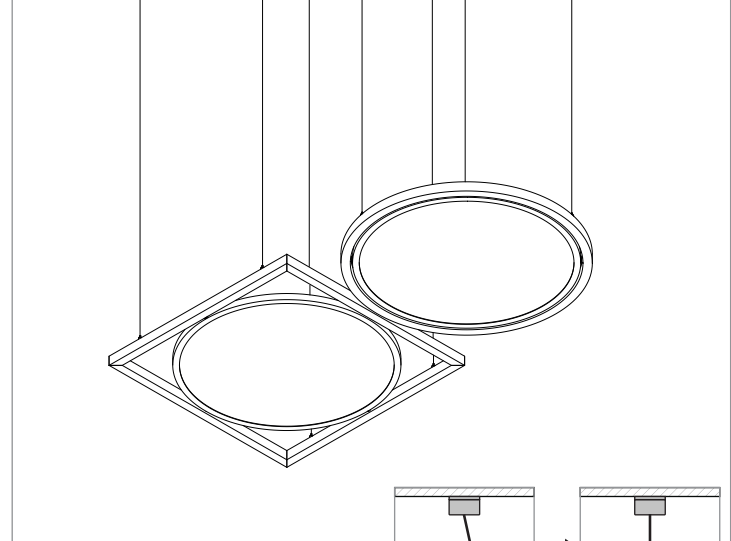


Diagram illustrating the correct and incorrect way to mount the spring. The incorrect way (marked with a red X) shows the spring not fully seated in the recessed zone. The correct way (marked with a green checkmark) shows the spring fully seated.

01 - 28/04/2023

IP 20 UK CA CE