

2.0 LED 2.0 PAR16 1 2 4 5

DIMENSIONS ¹_{86x156} <u>1</u> 95 ⁴ 8-32 2.0 LED ³ 86x156 120 ⁴ 8-32 2.0 PAR16 MOUNTING INSTRUCTION 1 Make a hole in the ceiling according to the prescribed dimensions (always use a plasterkit). 2 Mount the plasterkit into the ceiling and screw it tightly on the ceiling, then plaster the borders seamlessly (screws are not included). See separate installation instruction of the plasterkit. POWER CONNECTION SERIAL CONNECTION - for LED Always use a driver according to the specifiations of the LED module 220-240V N L fixture 01 fixture 02 fixture + -+ -+ LED • -01 - LED O-0 N PARALLEL CONNECTION - for PAR16 100-240V N L fixture 01 fixture 02 fixtur LN LN LN Click the fixture into the plasterkit. Place the LED modules or PAR16 lamps in the


housing and fix them with the spring clips.

3


(4)

5

1

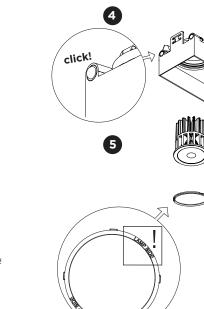



plasterkit




WEVER & DUCRÉ LIGHTING



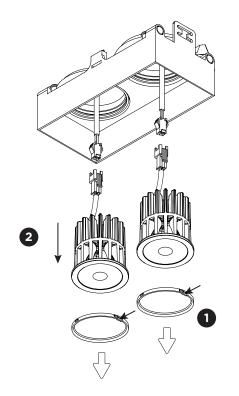

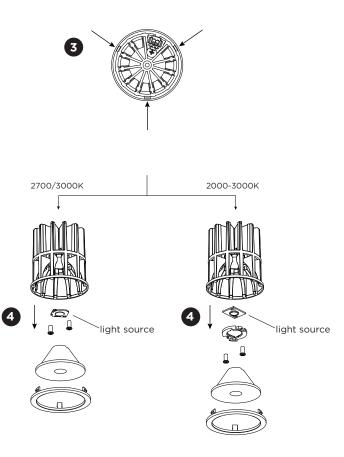

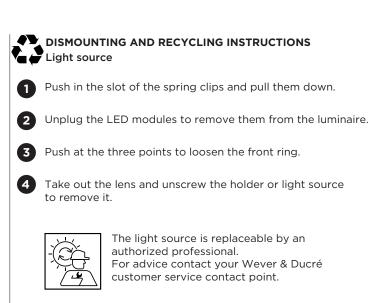



This luminaire contains a light source with the energy class D.

2