


K TRIBE F3

Designed by Philippe Starck, 2007

F6301046

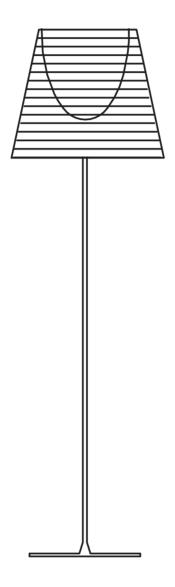



K TRIBE F3

ΕN

F6301046



01. F6298046 – Aluminized bronze diffuser assembly

02. RF28045 – Led 220/240V 40-250W 4-100W Rondò dimmer

03. RF3020100 – Kit of n.5 white feet pads for base



ΕN

F6298046

ALUMINIZED BRONZE DIFFUSER ASSEMBLY



ΕN

F6298046

ALUMINIZED BRONZE DIFFUSER ASSEMBLY

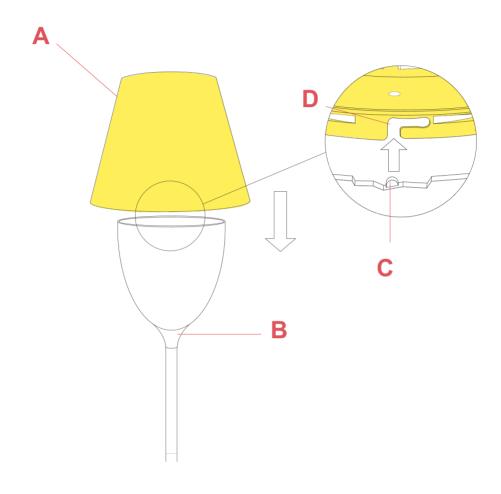


Fig.1

Install the external diffuser (A) onto the internal diffuser (B) being careful to make the three pins (C) in the internal diffuser correspond with the relative housings (D) in the external diffuser. Once carried out this operation it is necessary to lock the external diffuser by turning it slightly clockwise.




ΕN

RF28045

LED 220/240V 40-250W 4-100W RONDO' DIMMER



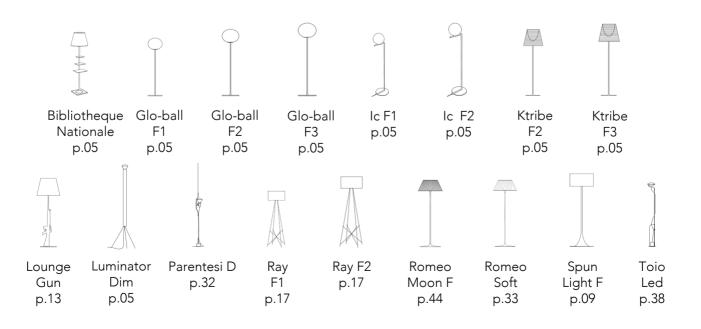

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

RF28045

LED 220/240V 40-250W 4-100W RONDO' DIMMER



Fig.1

Open the box of the damaged dimmer.

For the opening, it is necessary to remove the rubber pad from underneath the dimmer box;



Fig.2

Unfasten the screw that locks the triangle terminal cover;

ΕN

RF28045

LED 220/240V 40-250W 4-100W RONDO' DIMMER



Fig.3

Turn the dimmer box and remove the terminal cover;



Fig.4

Unfasten the three screws of the cable clamps;

ΕN

RF28045

LED 220/240V 40-250W 4-100W RONDO' DIMMER



Fig.5



Fig.6

Remove the cable clamp (refer to fig. 5) and disconnect the cables from the green terminal box .

Assemble now the new dimmer:

Connect the cables respecting the polarities, lock the wires by positioning the cable clamp and then fasten the three screws, cover the green terminal box with the triangle cover, turn the dimmer box, fasten the screw and stick-on the rubber pads.




ΕN

RF3020100

KIT OF 5 WHITE FEED PADS FOR BASE



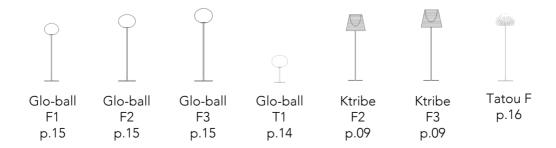

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.



ΕN

RF3020100

KIT OF 5 WHITE FEED PADS FOR BASE

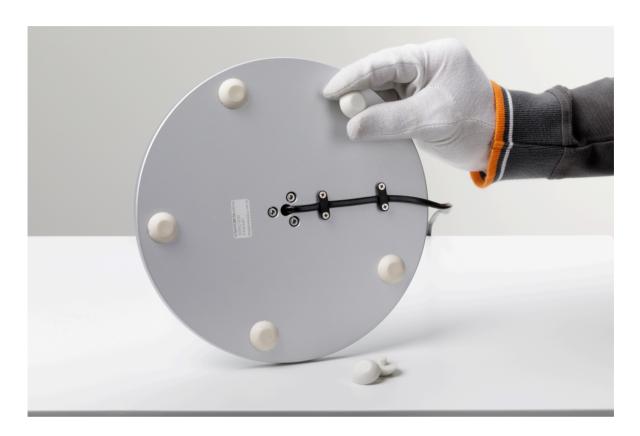


Fig.1

Glue the feet (A) to the base by utilizing glue. We advise to utilize the Loctite 454 glue.