# RF4681100


Led Board for Oplight W1



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

## RF4681100

Led Board for Oplight W1

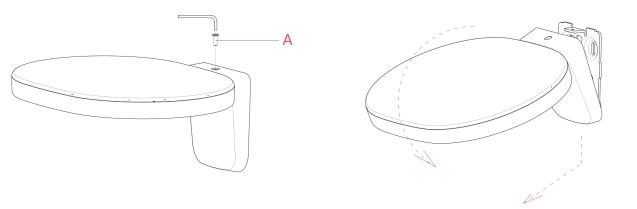




Unscrew the screw (A). Remove the body lamp from the wall attach.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

Fig.2

### RF4681100

Led Board for Oplight W1

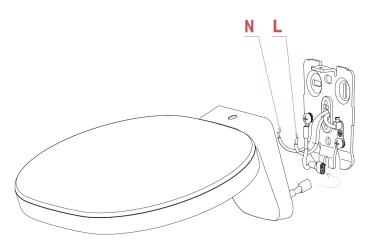

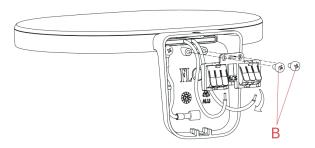


Fig.3

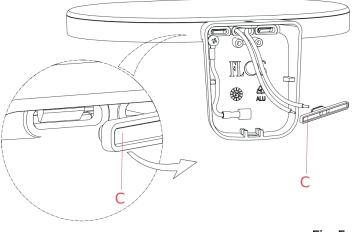


Fig.5


#### Disconnect the electrical cables (L-N) from the cable clamp.(Fig.3) Remove the n° 2 screws (B).(Fig.4) Remove the rubber cable gland (C).(Fig.5)

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

Fig.4

### RF4681100

Led Board for Oplight W1

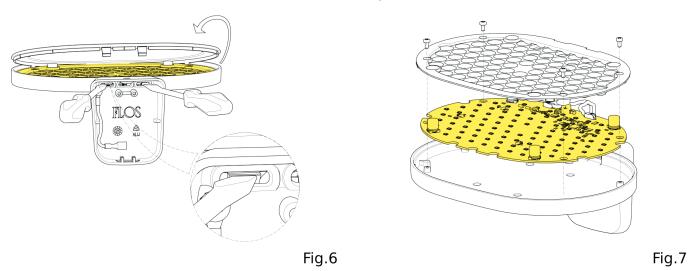

Using a cut screwdriver force the white plastic diffuser and remove it from body lamp. Unscrew the n°4 screws and remove the white plastic grid.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

# RF4681100

Led Board for Oplight W1

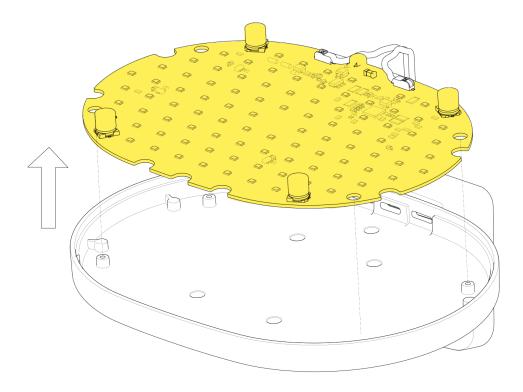


Fig.8

Remove and replace the led chip board. Assemble now the new spare part. Position the plastic grid on the led chip board and screw the n°4 screws. (Fig.7) Fix the diffuser to the body lamp. Pass the cables through the white plastic support.(Fig.5) Connect the electrical cables to the cable clamps and screw the n°2 screws.(Fig.4) Fix the body lamp to the wall attach. Screw the screw (A).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.