




Qbini Frame 1X

141710XX


Scan for installation video or go to supermodular.com/en/qbini-frame/





USE INCLUDED CARDBOARD TEMPLATE TO CUT SQUARE HOLE

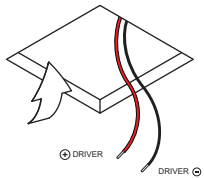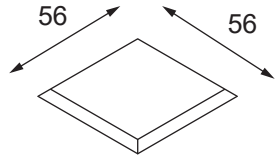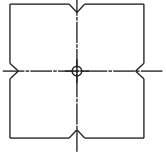


!
CONNECT LED DRIVER TO POWER SUPPLY AND PUT INTO THE CEILING THROUGH HOLE BEFORE INSTALLING FRAME

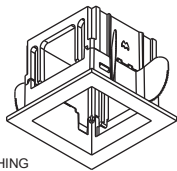


INSTALL FRAME BY PUSHING IN RECESSED HOLE

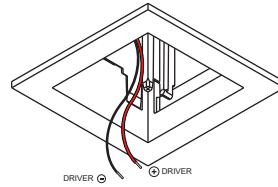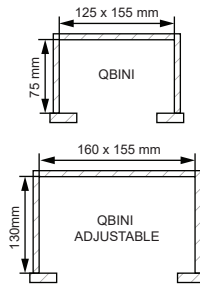

DRIVER (-) DRIVER (+)

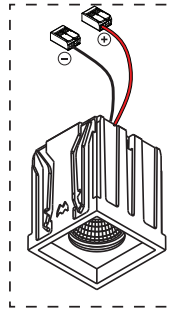

MODULE NEEDS TO BE ORDERED SEPARATELY

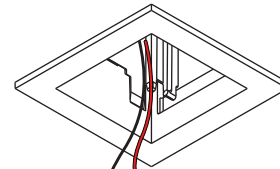


DRIVER (-) DRIVER (+)




PUSH IN

FIRST LATCHED POSITION

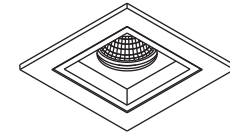


1

PUSH module UP for SECOND LATCHED POSITION

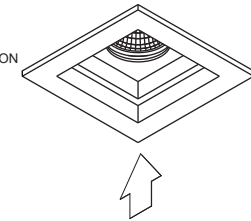


2

PUSH module further UP for RELEASE POSITION

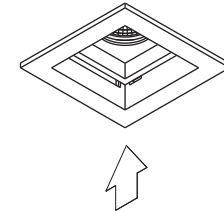

3

PULL module DOWN to remove

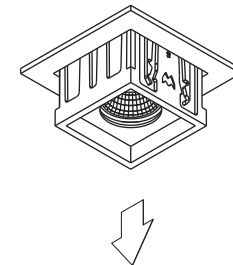

4



04 - 27/02/2023