




Qbini Frame 1X

141710XX


Scan for installation video or go to supermodular.com/en/qbini-frame/





USE INCLUDED CARDBOARD TEMPLATE TO CUT SQUARE HOLE

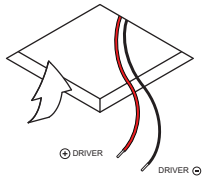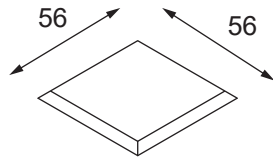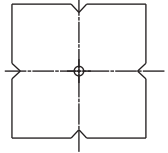




INSTALL FRAME BY PUSHING IN RECESSED HOLE

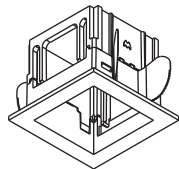


CONNECT LED DRIVER TO POWER SUPPLY AND PUT INTO CEILING THROUGH HOLE BEFORE INSTALLING FRAME
TURN OFF POWER DURING INSTALLATION

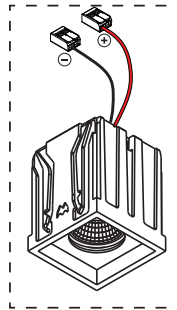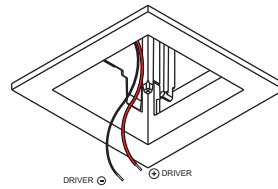


MODULE NEEDS TO BE ORDERED SEPARATELY

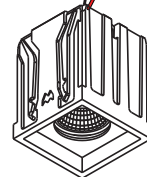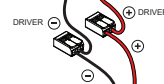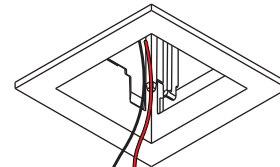

PUSH IN

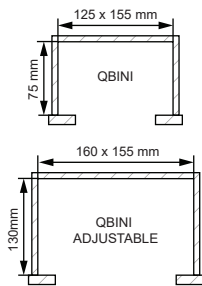


FIRST LATCHED POSITION

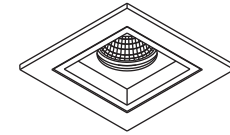


1

PUSH module UP for SECOND LATCHED POSITION

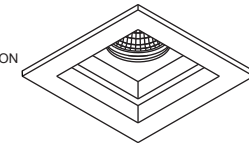


2

PUSH module further UP for RELEASE POSITION

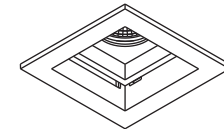

3

PULL module DOWN to remove

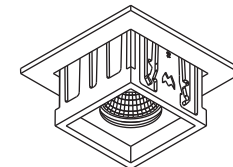

4



05 - 17/10/2023