

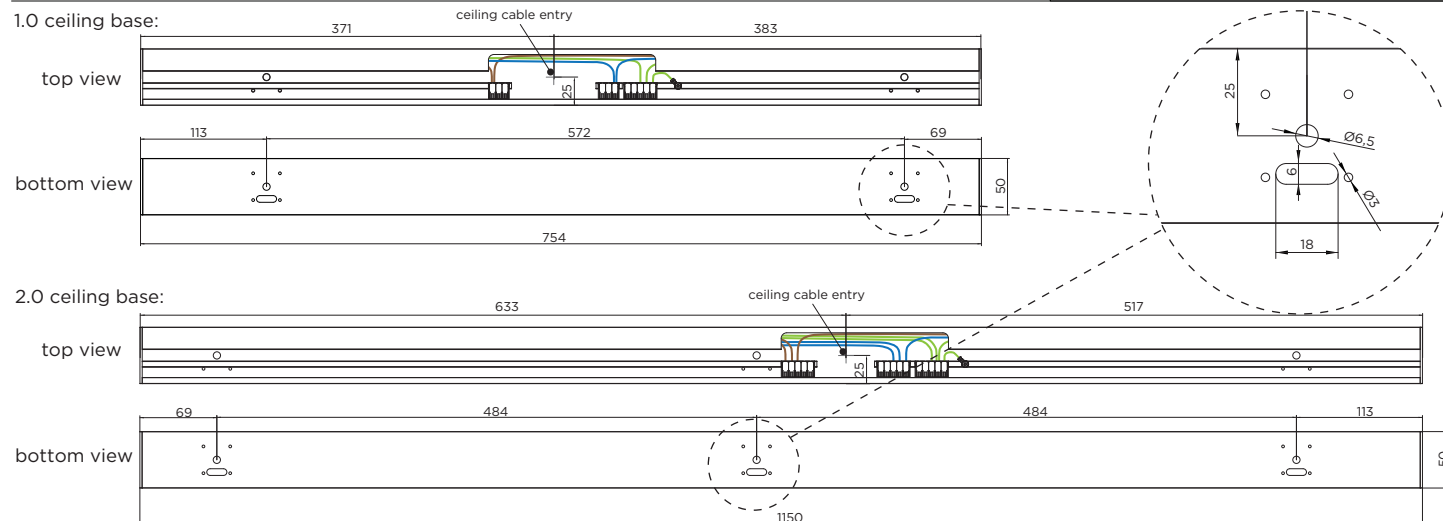


PIRRO SYSTEM

INSTALLATION INSTRUCTIONS | NOVEMBER 2021

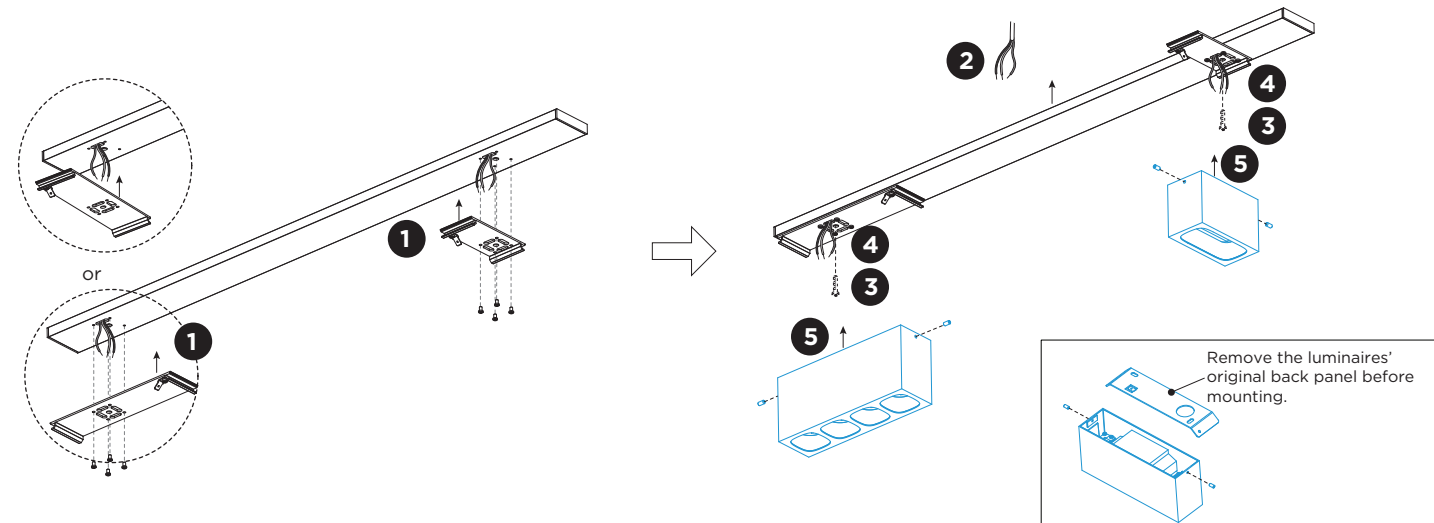

DIMENSIONS

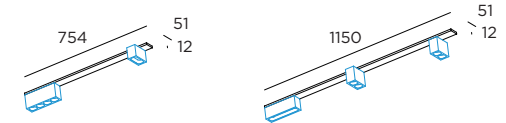

1.0 CEILING BASE

2.0 CEILING BASE


MOUNTING INSTRUCTION

- 1 Mount the panels into the wanted composition on the ceiling base with the screws (screws are included).

- 2 **POWER CONNECTION**
connect to 220-240V

1.0 CEILING BASE

2.0 CEILING BASE

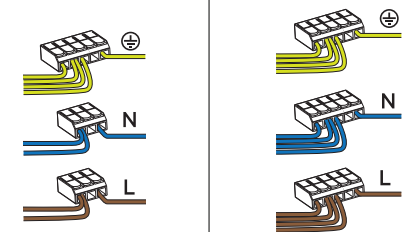

- 3 Mount the ceiling base to the ceiling with screws (screws are not included).

- 4 For the power connection of the PIRRO luminaires please check the corresponding installation instructions.

After having removed the original back panel from the luminaire, fix the luminaire to the back panel that is now already mounted to the ceiling base. Use the socket screws from the luminaire to tighten..

PB19-010-76+00_v1