


shot tee

instructions for use

For unpaved beds and greens

1. Loosen firm soil first.
2. Stick ground spike in the ground in intended position.
The support surface of the bowl has to protrude above the floor by minimum 5 cm. Do not apply pressure to the bowl – see pictures 1 - 3.
3. Place luminaire shot in the bowl. The IP44.de logo signals position ,TOP'. Please ensure the correct position ,TOP', so that water can flow off and that no backwater can collect in cable- and membrane tunnel. The ball should be tilted only that far, that backwater can't ingress directly into cable- and membrane tunnel – see pictures 4 + 5.

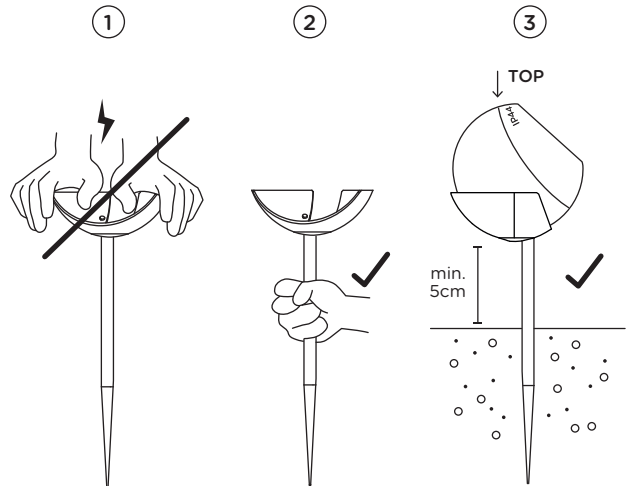

care:

Regularly clean shot tee and luminaire from dirt and deposits.
Do not use a high pressure cleaner for cleaning.
Please note care instructions at www.IP44.de.

