


GLO-BALL W

Designed by Jasper Morrison, 1999


F3022000

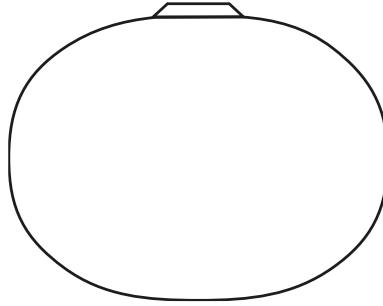

GLO-BALL W

F3022000

EN

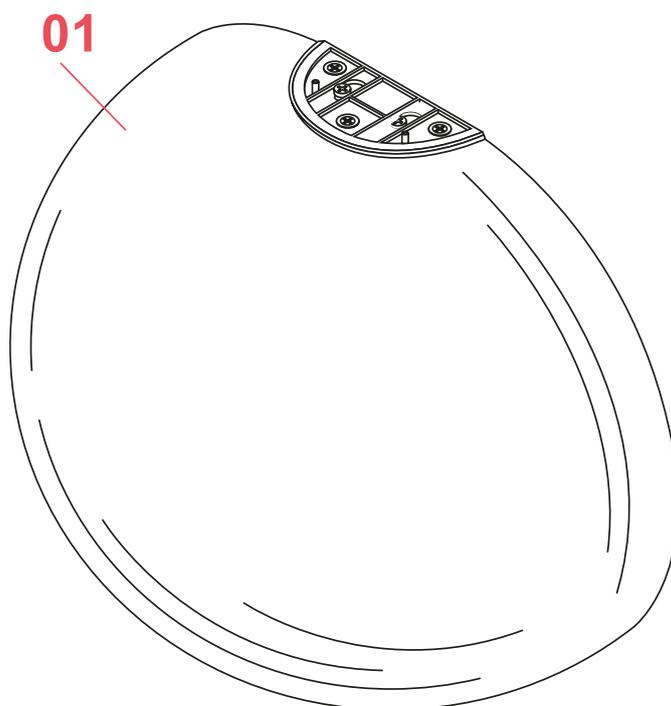

01. RF3022000 – White diffuser

GLO-BALL W F3022000

EN

RF3022000

WHITE DIFFUSER



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com

Flos reserves the right to introduce any changes to its own models, without prior notice.

GLO-BALL W F3022000

EN

RF3022000

WHITE DIFFUSER

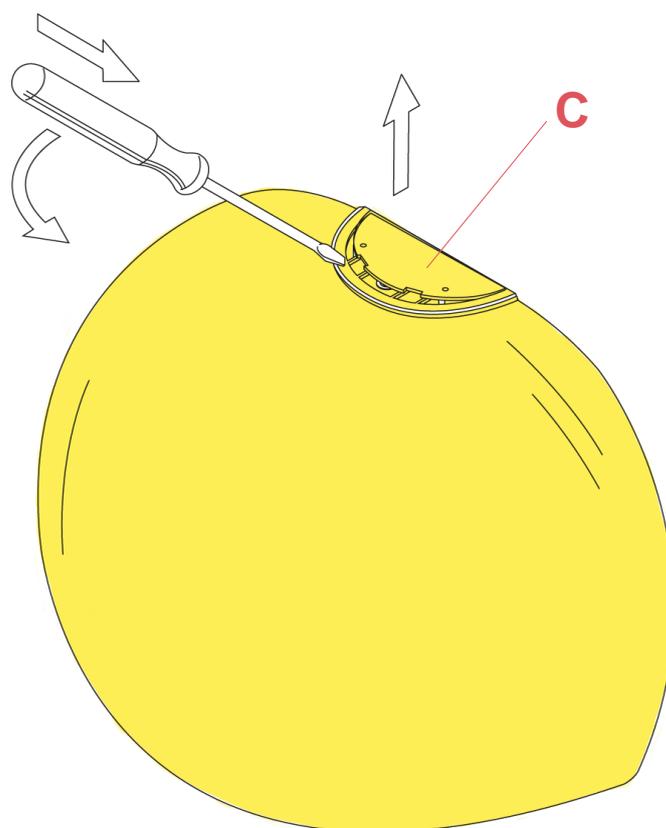


Fig.1

Remove the anti-dust screen (D) by utilizing a flat screw driver.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

GLO-BALL W F3022000

EN

RF3022000

WHITE DIFFUSER

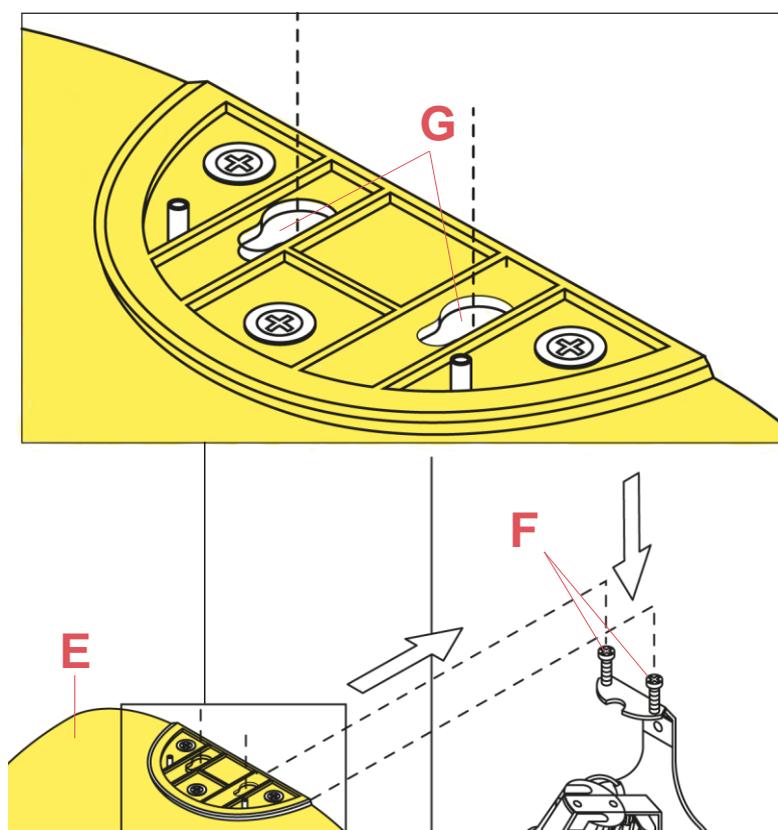


Fig.2

Position the diffuser (E) on the lamp body and insert the screws (F) without fastening yet in the slots (G).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

GLO-BALL W F3022000

EN

RF3022000

WHITE DIFFUSER

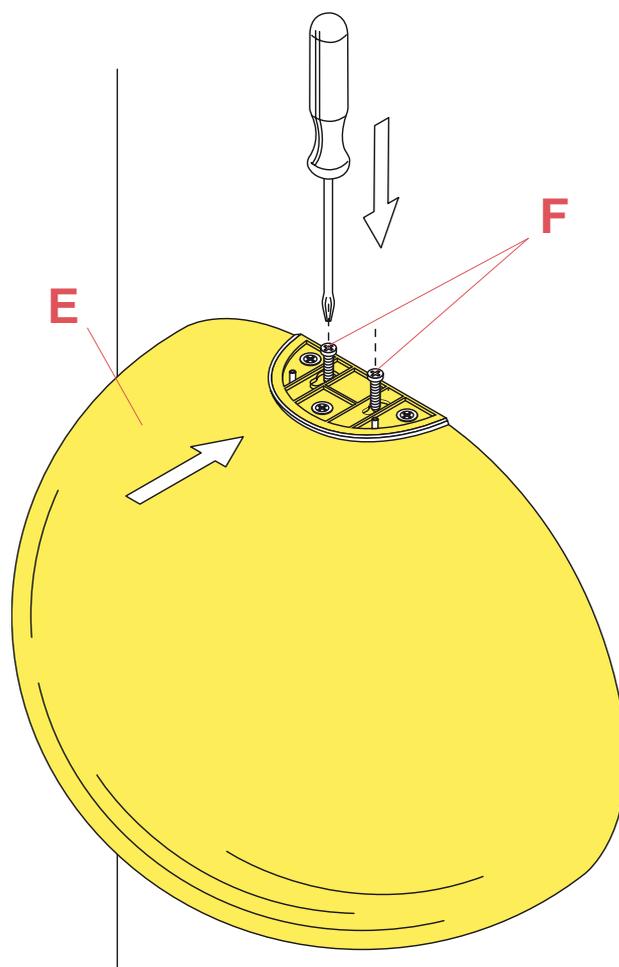


Fig.3

Push the diffuser (E) towards the wall and assemble it by fastening the screws (F).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

GLO-BALL W F3022000

EN

RF3022000

WHITE DIFFUSER

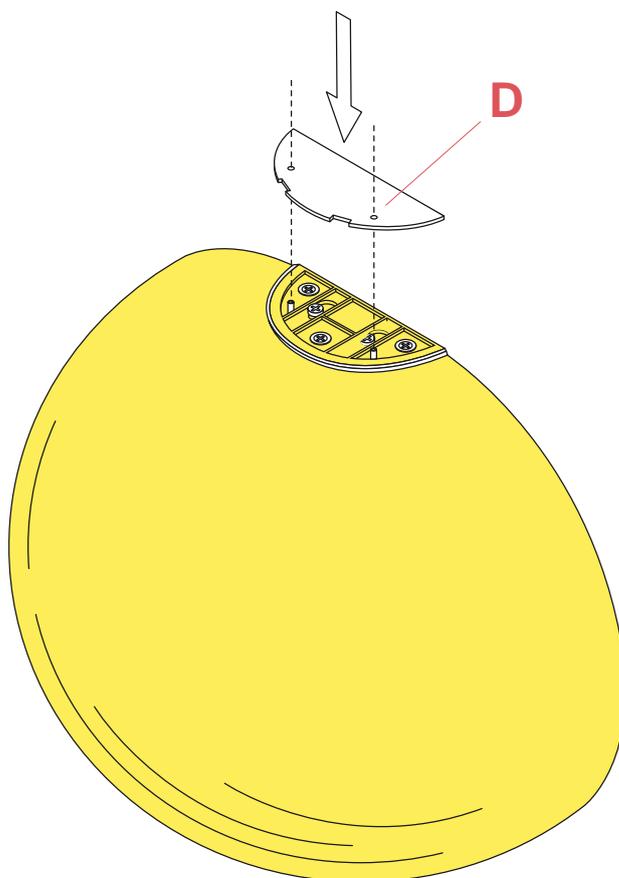


Fig.4

Position the anti-dust screen (D), ensuring to make the two holes correspond with the reference studs.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.