



Qbini trimless frame (combinations)

141800XX 141801XX 141802XX 141803XX

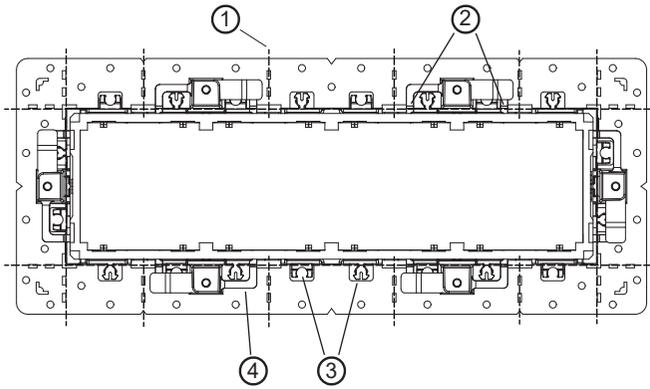

- ① BREAK-OFF LINES FOR COMBINING FRAMES (ALL DASHED LINES)
- ② CUT MARKS ON REINFORCEMENT ARM FOR COMBINING FRAMES
- ③ SNAP FEATURES FOR COMBINING FRAMES
- ④ REINFORCEMENT ARM

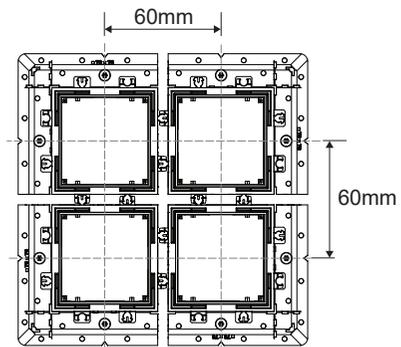


CENTER DISTANCE BETWEEN COMBINED FRAMES ALWAYS 60mm


STEP 1: COMPOSE YOUR INDIVIDUAL DESIGN




STEP 2: PRESENT YOUR COMPOSED COMBINATION TO SEE WHICH BREAK-OFF LINES ARE APPLICABLE

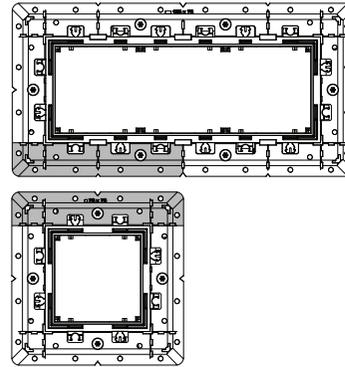



STEP 3: USE SIDE CUTTER TO CUT LOOSE CORRECT REINFORCEMENT ARMS ON THE CUT MARKER

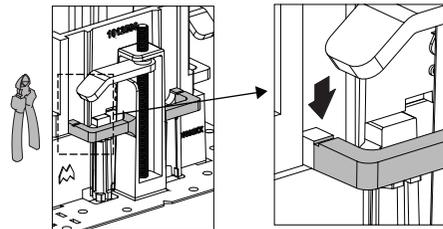


STEP 4: BREAK-OFF THE FLANGES ON THE CORRECT BREAK-OFF LINES

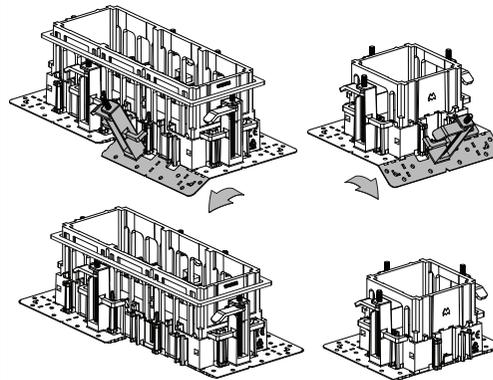

STEP 5: CONNECT THE FRAMES BY PRESSING THE SNAP FEATURES INTO EACH OTHER

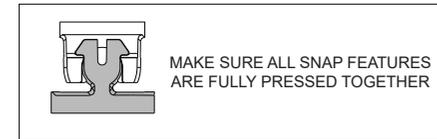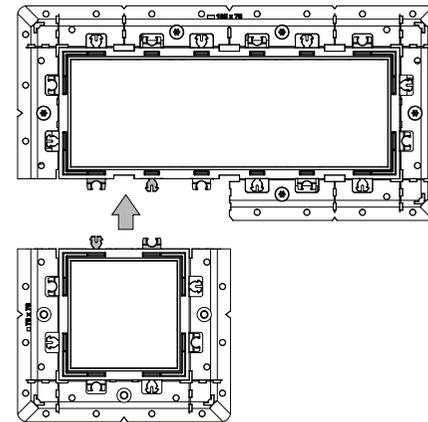

STEP 6: USE THE CENTER MARKERS TO DEFINE HOLE SAW CENTERS

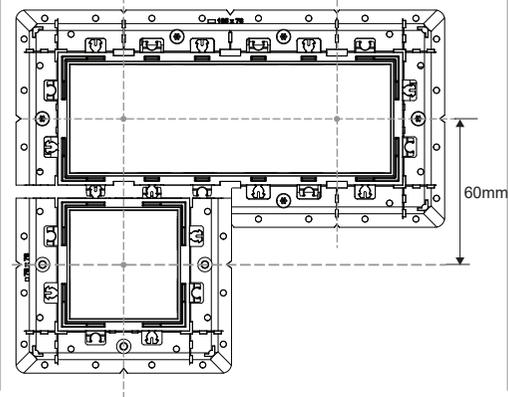

STEP 7: INSTALL THE FRAME BY USING INSTALLATION INSTRUCTION

