
WIRO SINGLE DECENTER SET

INSTALLATION INSTRUCTIONS | MAY 2023

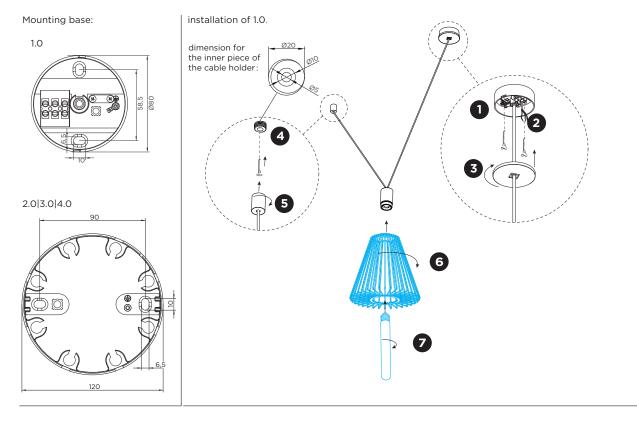

This suspension set can be applied to several Wiro shades. Such as:



ø248

Shade of 1.0 CONE



Shade of 2.0 WIRO



ø187 Shade of 1.8 WIRO



ø387 Shade of 3.8 WIRO




Shade of 1.1 DIAMOND



Shade of 4.0 GLOBE


308

DIMENSIONS



MOUNTING INSTRUCTION

- Remove the cover of the mounting base and mount the base on the ceiling with screws (screws are not included).
- 2 POWER CONNECTION
 Connect to 220-240V.




- Mount the ceiling cover back on the ceiling base by aligning the clips in the groove and turning clock wise.
- 4 Screw out the inner piece of the cable holder and fix it on the ceiling with a screw (screw is not included).
- 5 Screw the cable holder back to the inner piece.
- 6 Mount the shade on the fixture by turning clockwise.
- 7 Mount the bulb.

for installation of 2.0/3.0/4.0, please find the details on page 2

PB19-010-827-00_v1

WIRO SINGLE DECENTER SET

INSTALLATION INSTRUCTIONS | MAY 2023

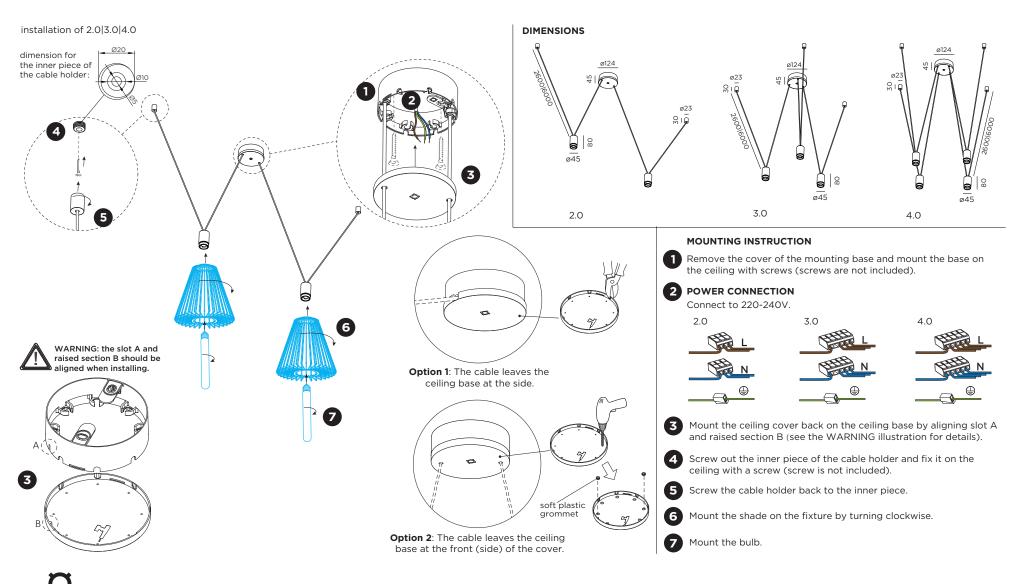

WEVER & DUCRÉ

LIGHTING