

STYLOS

Designed by Achille Castiglioni, 1984

F6310004






STYLOS

EN

F6310004

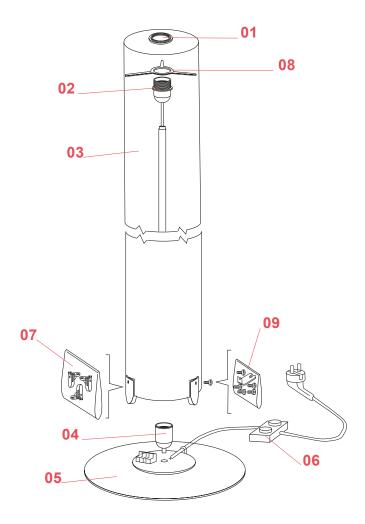

- 01. RF04424 Ring nut
- **02. RF6320100** Top lamp holder assembly
- 03. RF6330000 Diffuser
- **04. RF03646** Lower lamp holder assembly
- **05. F6320004** Packed base
- 06. RF03631 Black double switch
- 07. RF6330100 Kit of n.3 diffuser bracket supports
- 08. RF05861 Polycarbonate spacer
- **09. RF6330200** Kit of screws and metal bracket for diffuser assembly



STYLOS F6310004

RF04424

RING NUT VB 73





STYLOS F6310004

RF04424

RING NUT VB 73

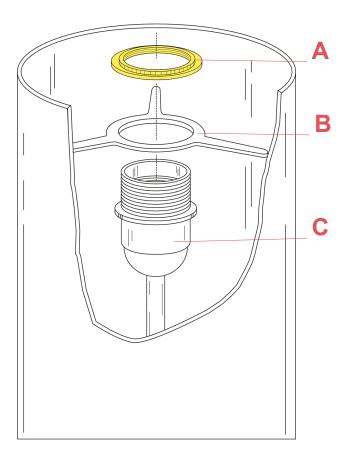


Fig.1

Collacate the spacer (B) onto the upper lamp holder (C) and fasten the ring nut (A). Install the bulb.



STYLOS F6310004

RF6320100

TOP LAMP HOLDER ASSEMBLY






STYLOS F6310004

EN

RF6330000

DIFFUSER





STYLOS F6310004

RF6330000

DIFFUSER

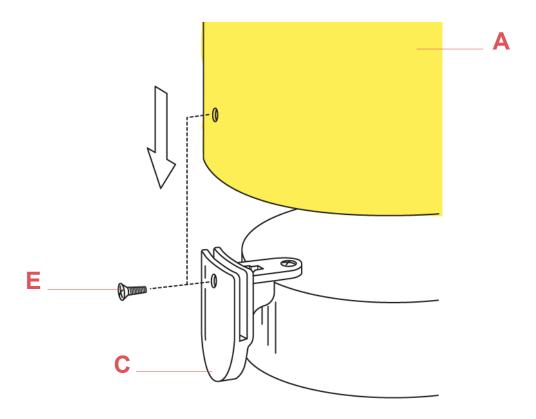


Fig.1

Slide the diffuser (A) through the metal stem.

Insert the diffuser (A) into the metal structure (B) and through the openings in the supports (C). Utilize the tip of a screwdriver to help your self if necessary to align the holes in the diffuser to correspond with those present on the support.

Assemble the diffuser (A) by fastening screws (E).



STYLOS F6310004

RF03646

LOWER LAMP HOLDER ASSEMBLY





STYLOS F6310004

F6320004

BASE





STYLOS F6310004

F6320004

BASE

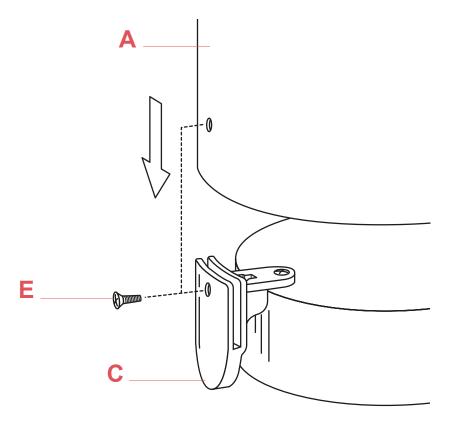


Fig.1

Unfasten the three screws (E) from the support (C) and then lift-up the diffuser (A).



STYLOS F6310004

F6320004

BASE

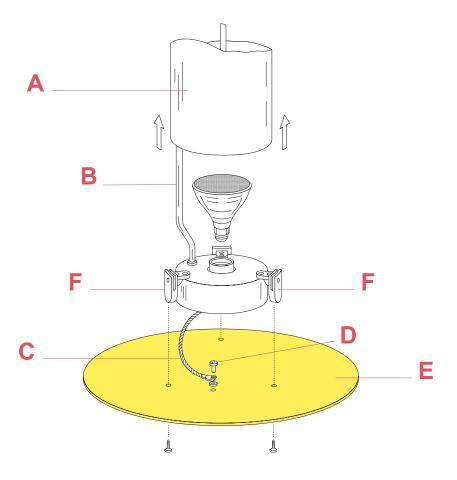


Fig.2

Remove the diffuser (A) from the metal stem (B). Unfasten the "PAR" bulb from the lower lamp holder. Remove the base (E) from the supports (F) by unfastening the three self-threading screws.

Unfasten the screw (D) and disconnect the earth wire (C).

Assemble now the new spare-part:

Connect the earth cable (C) to the base (e) by fastening the screw (D), ensuring to insert the cable between the screw and the notched washer; Assemble the base (E) to the supports (F) by fastening the three self-threading screws. Screw the "PAR" bulb into the lower bulb-holder.

Slide the diffuser (A) through the metal stem (B).



STYLOS F6310004

F6320004

BASE

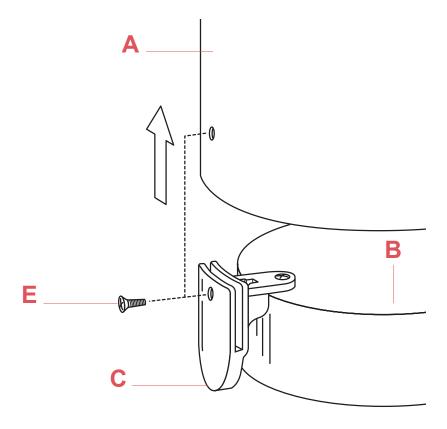


Fig.3

Insert the diffuser (A) into the metal structure (B) and through the openings in the supports (C). Utilize the tip of a screwdriver to help your self if necessary to align the holes in the diffuser to correspond with those present on the support.

Assemble the diffuser (A) by fastening screws (E).



STYLOS F6310004

RF03631

DOUBLE BLACK SWITCH





STYLOS F6310004

RF6330100

KIT OF N.3 DIFFUSER BRACKET SUPPORTS





STYLOS F6310004

RF6330100

KIT OF N.3 DIFFUSER BRACKET SUPPORTS

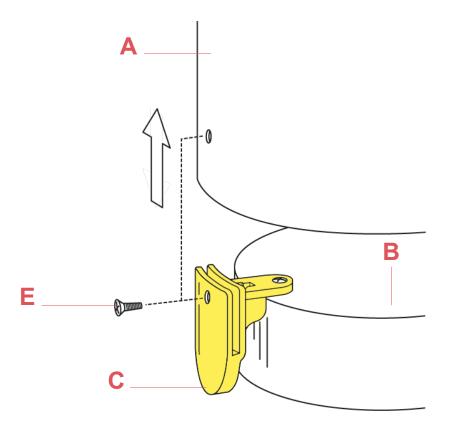


Fig.1

Unfasten the screws (E) from the support (C) and then lift-up the diffuser (A).



STYLOS F6310004

RF6330100

KIT OF N.3 DIFFUSER BRACKET SUPPORTS

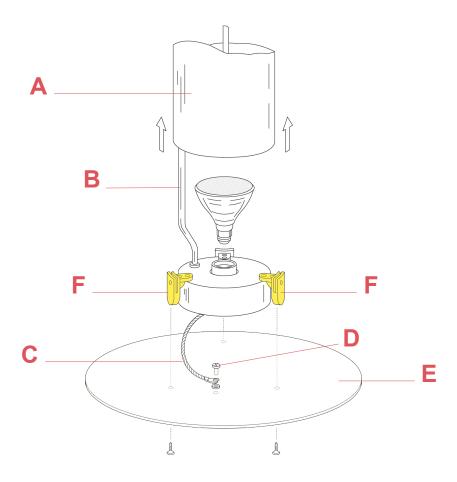


Fig.2

Remove the diffuser (A) from the metal stem (B). Unfasten the "PAR" bulb from the lower lamp holder. Remove the base (E) from the supports (F) by unfastening the three self-threading screws. Unfasten the screw (D) and disconnect the earth wire (C).

Assemble now the new spare-part:

Connect the earth cable (C) to the base (e) by fastening the screw (D), ensuring to insert the cable between the screw and the notched washer; Assemble the base (E) to the supports (F) by fastening the three self-threading screws. Screw the "PAR" bulb into the lower bulb-holder.

Slide the diffuser (A) through the metal stem (B).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.

For the installation of the spare-part, it is necessary to consult a qualified electrician.



STYLOS F6310004

RF6330100

KIT OF N.3 DIFFUSER BRACKET SUPPORTS



Fig.3

Remove the support (F) by unfastening the screw (G).

Remarks!!! Utilize the metal brackets (H) for the new spare-part.

Install the support (F) with the metal bracket.

STYLOS F6310004

RF6330100

KIT OF N.3 DIFFUSER BRACKET SUPPORTS

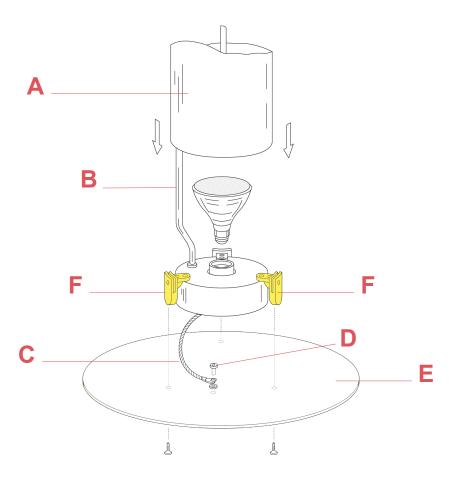


Fig.4

Connect the earth cable (C) to the base by fastening the screw (D), ensuring to insert the cable between the screw and the notched washer; Assemble the base (E) to the supports (F) by fastening the three self-threading screws.

Screw the "PAR" bulb into the lower bulb-holder. Slide the diffuser (A) through the metal stem (B).

Insert the diffuser (A) into the metal structure (B) and through the openings in the supports (C). Utilize the tip of a screwdriver to help your self if necessary to align the holes in the diffuser to correspond with those present on the support.


Assemble the diffuser (A) by fastening screws (E).(Fig.1 page 15)



STYLOS F6310004

RF05861

POLYCARBONATE SPACER

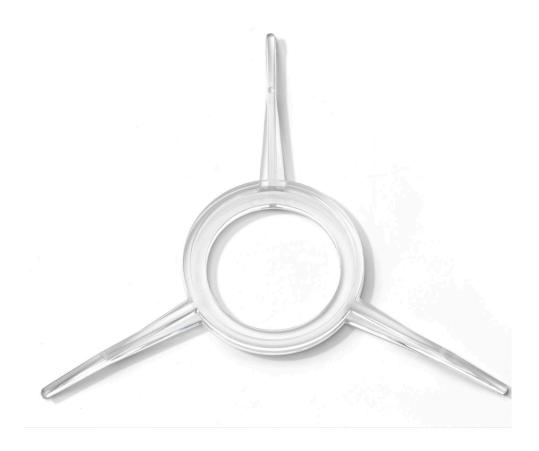



STYLOS F6310004

RF05861

POLYCARBONATE SPACER

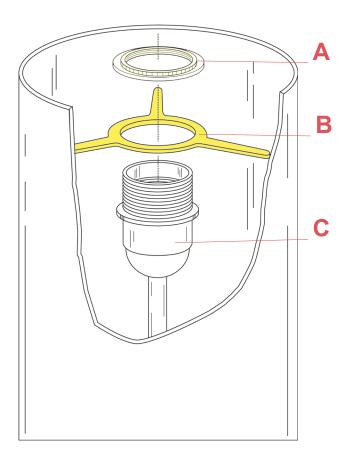


Fig.1

Remove the lamp bulb from the lamp holder.
Unfasten the ring nut (A) and remove the damaged spacer (B) from the upper lamp holder (C).

Assemble now the new spare-part:

Collocate the spacer (B) onto the upper lamp holder (C) and fasten the ring nut (A).

Install the bulb.



STYLOS F6310004

RF6330200

KIT OF SCREWS AND METAL BRACKET FOR DIFFUSER ASSEMBLY





STYLOS F6310004

RF6330200

KIT OF SCREWS AND METAL BRACKET FOR DIFFUSER ASSEMBLY

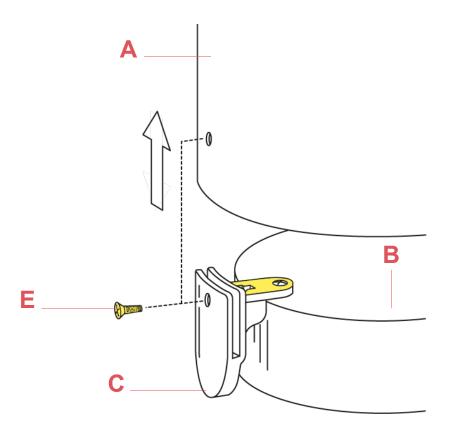


Fig.1

Unfasten the three screws (E) from the support (C) and then lift-up the diffuser (A).



STYLOS F6310004

RF6330200

KIT OF SCREWS AND METAL BRACKET FOR DIFFUSER ASSEMBLY

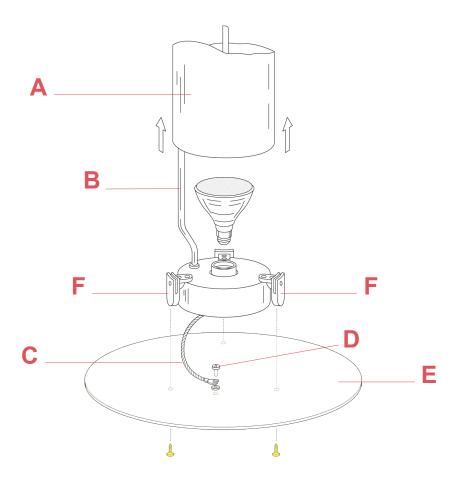


Fig.2

Remove the diffuser (A) from the metal stem (B).

Unfasten the "PAR" bulb from the lower lamp holder.

Remove the base (E) from the supports (F) by unfastening the three self-threading screws.

Unfasten the screw (D) and disconnect the earth wire (C).



STYLOS F6310004

RF6330200

KIT OF SCREWS AND METAL BRACKET FOR DIFFUSER ASSEMBLY



Fig.3

Remove the support (F) by unfastening the screw (G).

Remarks!!! Replace the metal brackets (H).

Install the support (F) with the metal bracket.

STYLOS F6310004

RF6330200

KIT OF SCREWS AND METAL BRACKET FOR DIFFUSER ASSEMBLY

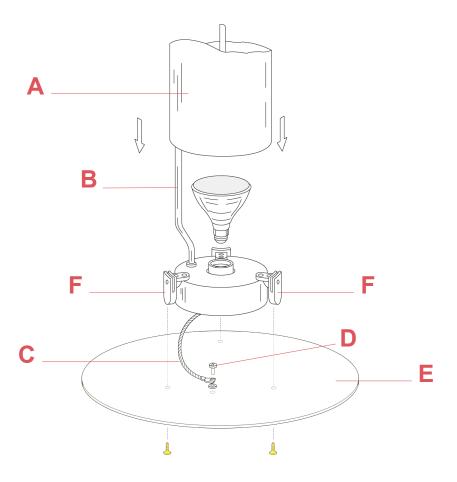


Fig.4

Connect the earth cable (C) to the base by fastening the screw (D), ensuring to insert the cable between the screw and the notched washer; Assemble the base (E) to the supports (F) by fastening the three self-threading screws supplied in the spare-part

Screw the "PAR" bulb into the lower bulb-holder. Slide the diffuser (A) through the metal stem (B).

Insert the diffuser (A) into the metal structure (B) and through the openings in the supports (C). Utilize the tip of a screwdriver to help your self if necessary to align the holes in the diffuser to correspond with those present on the support.

Assemble the diffuser (A) by fastening screws (E) supplied in the spare-part kit.(Fig.1 page 22)