


# IC F2


Designed by Michael Anastassiades, 2014

F3174035

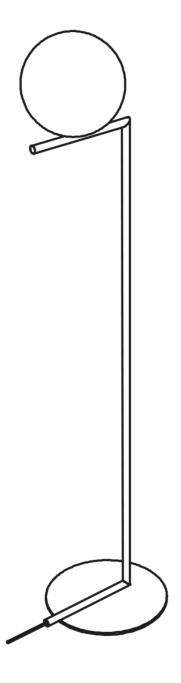





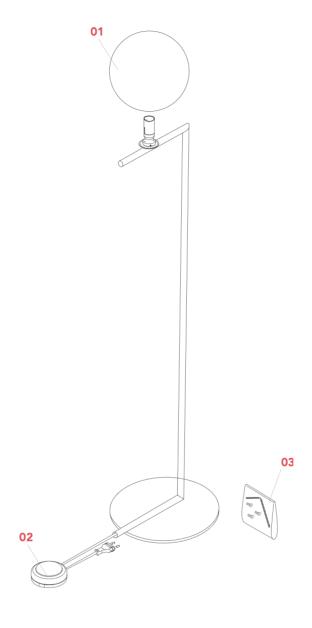

**01. F3137035** – Glass diffuser 2 assembly for red burgundy version

**02. RF28045** – Led 220-240V 40-250W 4-100W Rondò dimmer

03. RF3130100 – Screw kit with Allen key for base assembly




ΕN

## F3137035

GLASS DIFFUSER 2 ASSEMBLY FOR RED BURGUNDY VERSION



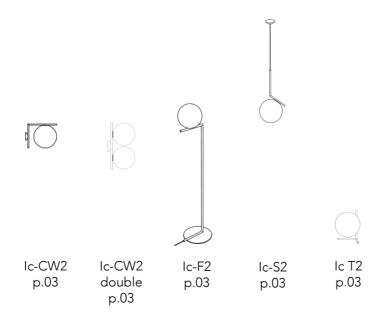

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.



ΕN

## F3137035

GLASS DIFFUSER 2 ASSEMBLY FOR RED BURGUNDY VERSION

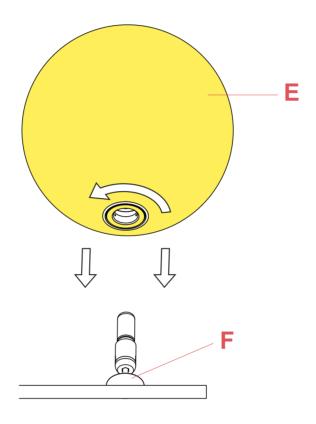


Fig.1

Assemble the glass diffuser (E) by fastening it delicately to the lamp body's ferrule (F).




ΕN

## RF28045

LED 220/240V 40-250W 4-100W RONDO' DIMMER



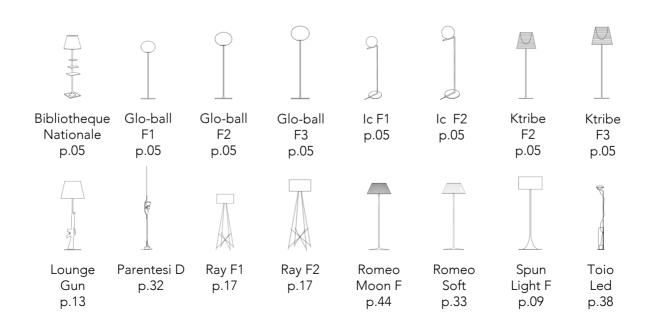

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

### RF28045

LED 220/240V 40-250W 4-100W RONDO' DIMMER



Fig.1

Open the box of the damaged dimmer. For the opening, it is necessary to remove the rubber pad from underneath the dimmer box;



Fig.2

Unfasten the screw that locks the triangle terminal cover.

ΕN

## RF28045

LED 220/240V 40-250W 4-100W RONDO' DIMMER



Fig.3

Turn the dimmer box and remove the terminal cover;



Fig.4

Unfasten the three screws of the cable clamps;

#### ΕN

### RF28045

LED 220/240V 40-250W 4-100W RONDO' DIMMER



Fig.5

Remove the cable clamp and disconnect the cables from the green terminal box.



Fig.6

Assemble now the new dimmer: Connect the cables respecting the polarities, lock the wires by positioning the cable clamp and then fasten the three screws, cover the green terminal box with the triangle cover, turn the dimmer box, fasten the screw and stick-on the rubber pads.




#### ΕN

# RF3130100

SCREW KIT WITH ALLEN KEY FOR BASE ASSEMBLY



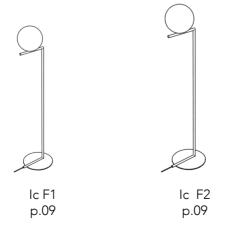

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.



ΕN

## RF3130100

SCREW KIT WITH ALLEN KEY FOR BASE ASSEMBLY

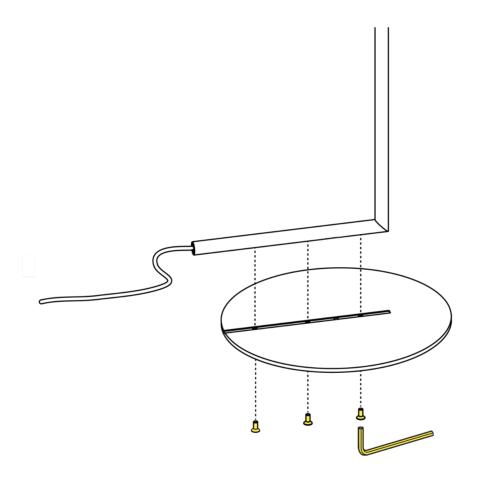


Fig.1

Assemble the base (C) onto the lamp body (B) by fastening the 3 screws (D) with the Allen key supplied with the kit.