
## **RETO** wall recessed

INSTALLATION INSTRUCTIONS | DECEMBER 2022



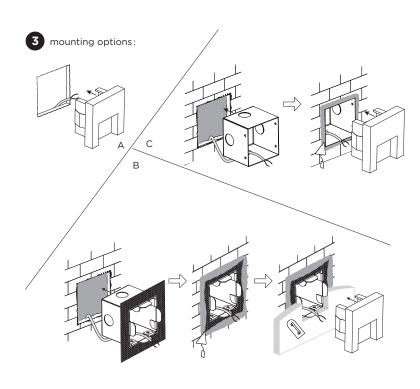


powered off before connecting cables.

Before connecting the luminaire/LED module to the driver please make sure the driver is not powered but disconnected from the mains. The driver can only be powered when the luminaire/LED module is already connected. Disregarding this instruction might damage or even destroy the luminaire/LED module.



## **DIMENSIONS**

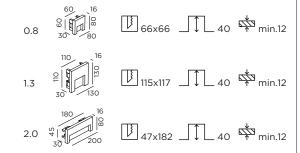





90012047 for 0.8



90012041 for 1.3



□<sub>191x58</sub> □ 60 90012039 for 2.0 concrete housing (optional):



90012046 for 0.8



121x121 1 60 90012040 for 1.3




192×58 1 60 90012044 for 2.0

## MOUNTING INSTRUCTION

- Make a hole in the wall according to the prescribed dimensions of the fixture or the recessed housing.
- **POWER CONNECTION**

Connect to 220-240V. Always use a driver according to the specifications of the fixture.

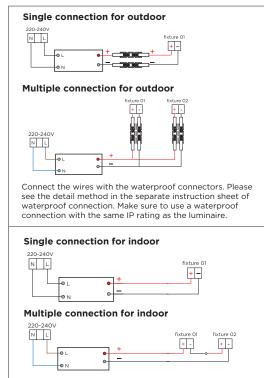




- A Insert the fixture in the hole. B - Insert the fixture in the plasterkit.
- C Insert the fixture in the concrete housing.



## **RETO** wall recessed

INSTALLATION INSTRUCTIONS | DECEMBER 2022

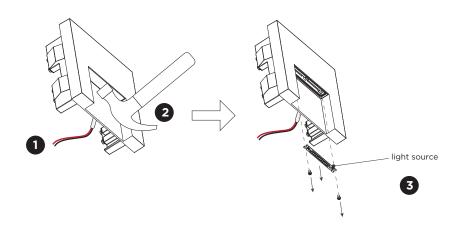



- 1 Pull out the fixture and disconnect the wires between the fixture and the driver.
- Break the lens.
- 3 Unscrew the light source, disconnect the wires and remove it.



The light source is not replaceable.

This luminaire contains a light source with the corresponding energy class:

RETO luminaire type	Energy class
outdoor 0.8/1.3/2.0	A G
indoor 0.8	A G
indoor 2.0	A E