

RF29550

Assembly Body Fixing for Coordinates F Anodized Champagne



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

RF29550

Assembly Body Fixing for Coordinates F Anodized Champagne

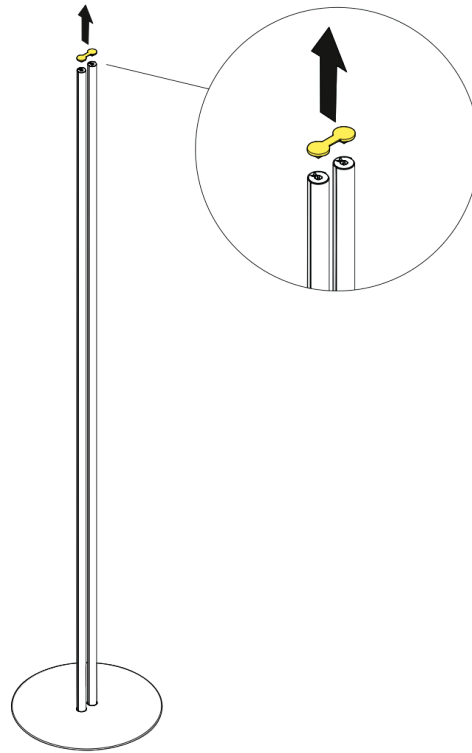


Fig.1

Remove the fixing kit assembly from the body.
Now assemble the new spare part.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.