
GLO-BALL C1


Designed by Jasper Morrison, 1999

F3023000

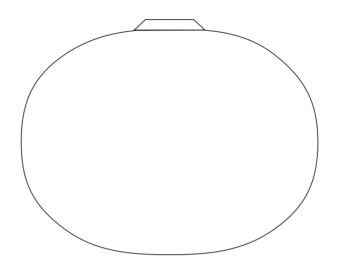

EN



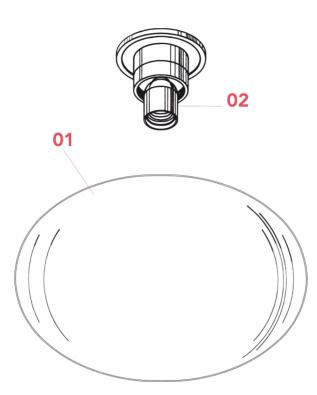


01. F3050061 – White/grey diffuser 1 02. RF2500200 – Lamp holder assembly **GLO-BALL C1** F3023000

EΝ

F3050061

WHITE/GREY DIFFUSER 1



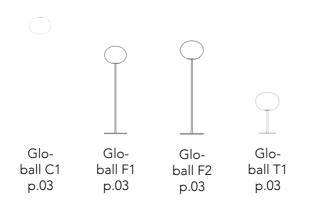


EΝ

GLO-BALL C1 F3023000

F3050061

WHITE/GREY DIFFUSER 1

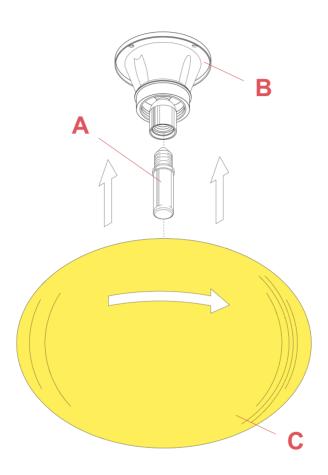



Insert the bulb (A). Position the diffuser (C) on the support (D) and secure it, turning it clockwise.


REV. 1 DATE 25/06/2021

EN

GLO-BALL C1 F3023000

RF2500200 LAMP HOLDER ASSEMBLY



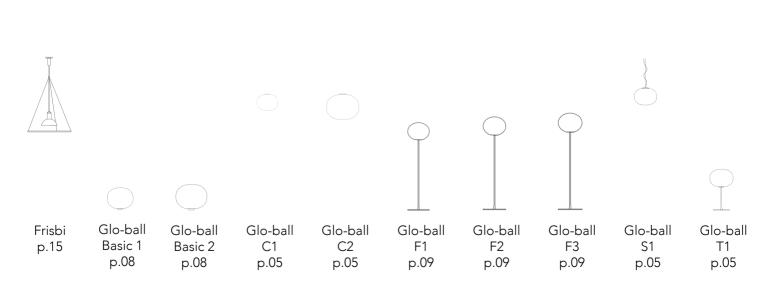


EN

GLO-BALL C1 F3023000

RF2500200 LAMP HOLDER ASSEMBLY

Fig.1

Fig.2

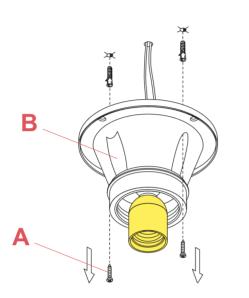

It is necessary to remove the lamp assembly (B) from the ceiling by unfasten the two fixing screws (A).

Cut-off the cable tie (D) and disconnect the wires from the terminal box (C).

GLO-BALL C1 F3023000

EN





Fig.3

Turn the assembly around.

Remove the lamp holder.

Insert a flat headed screw driver inside the opening of the lateral clamp and unhook the lamp holder (D) from the support. Repeat the same operation also for the opposite side.

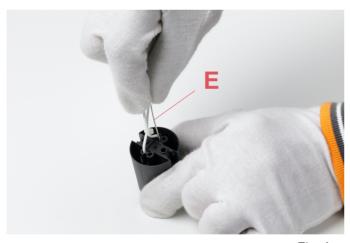


Fig.4

Remove the lamp holder from its support and disconnect the electrical wires by pressing the push terminals with a paper clip (E) or something similar.

EN

GLO-BALL C1 F3023000

RF2500200 LAMP HOLDER ASSEMBLY



Fig.5



Fig.6

Cut-off the cable tie (F) and remove the cable isolator (G) from the electrical cable.

REV. 1 DATE 25/06/2021

EN

GLO-BALL C1 F3023000

RF2500200 LAMP HOLDER ASSEMBLY

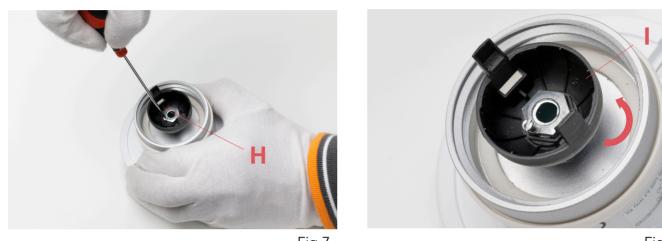


Fig.7









Fig.10

Unfasten the locking screw (H) by utilizing a tiny flat headed screw driver.

Remove the lamp holder support (I) by unfastening it from the assembly.

Assemble now the new spare-part:

Tighten the lamp holder support (I) onto the assembly and then fasten the locking screw (H) by utilizing a flat headed screw driver. Insert the isolator (F).

GLO-BALL C1 F3023000

EN

RF2500200



Fig.11

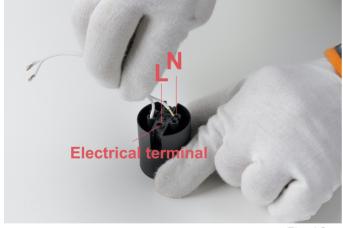


Fig.12

Connect the electrical wires to the lamp holder by utilizing always the paper clip. Connect the Brown "L" (live) wire in the terminal that corresponds (opposite side) to the centre brass contact of the lamp holder and then connect the Blue "N" (neutral) wire in the other terminal.

N.B. The electrical wires are connected by pushing the wires inside the terminals, therefore it is necessary to verify that they are connected properly.

Now reassembly the lamp:

Hook the lamp holder (D) on the support (I). Turn the assembly around and connect the electrical wires to the terminal box (C).(Fig.2 page 6)

Fix the lamp assembly (B) by fastening the screws (B).(Fig.1 page 6)