


# **SNOOPY**

Designed by Achille & Pier Giacomo Castiglioni, 1967

F6380030




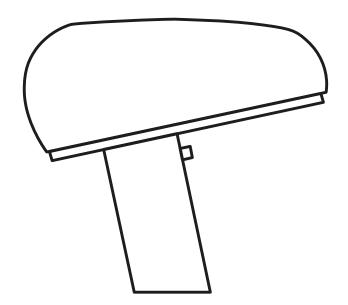

# **SNOOPY**

EN

F6380030

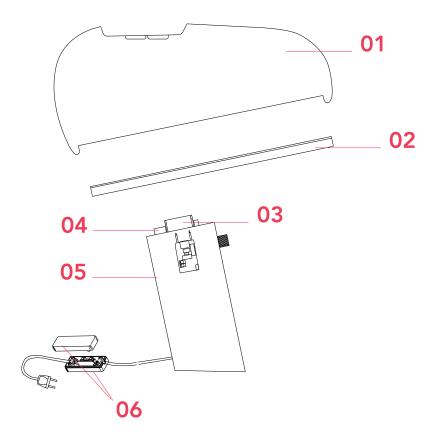

01. RF80966 - Black reflector

**02. RF84656** – Glass diffuser

**03. RF11912** – E27 Lamp holder

**04. RF11919** – Ring nut

05. RF26254 - Electronic touch dimmer

**06. RF12478** – Electrical assembly with fuse box



**SNOOPY** F6380030

# RF80966


BLACK REFLECTOR



**SNOOPY** F6380030

# RF80966

BLACK REFLECTOR

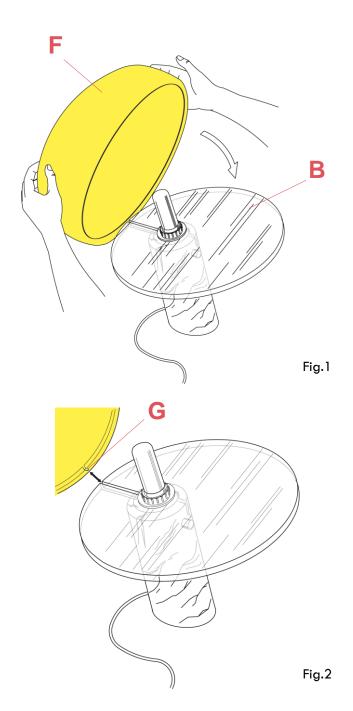

Position the reflector (F) on the glass (B) ensuring that the anti-rotation tooth (G) is inserted in the groove of the glass diffuser.



ΕN

# RF84656

**GLASS DIFFUSER** 






**SNOOPY** F6380030

## RF84656

**GLASS DIFFUSER** 

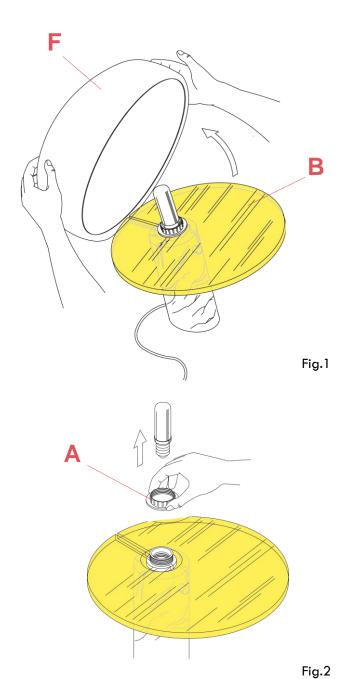

Remove the reflector (F) from the glass diffuser (B) that needs to be replaced.


Remove the glass diffuser (B) by removing the lamp-bulb and unfastening the locking ring nut (A).



**SNOOPY** F6380030

# RF84656

**GLASS DIFFUSER** 

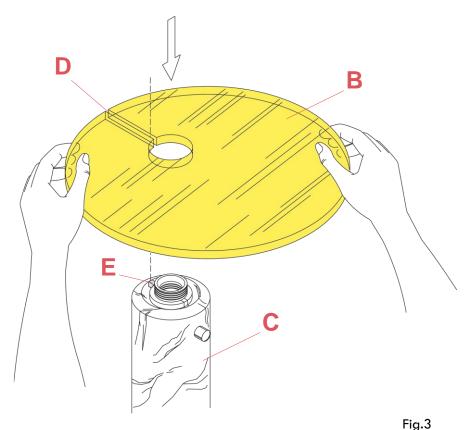

#### 1 19.0

#### Assemble now the new spare-part:

Place the glass diffuser (B) on the main body (C) ensuring that the groove (D) corresponds perfectly to the reference tooth (E).

Lock the glass diffuser (B) by fastening the locking nut (A) (fig.2 page 6) and insert the lamp-bulb.

Position the reflector (F) on the glass diffuser (B) ensuring that the anti-rotation tooth (G) is inserted in the groove of the glass diffuser. (fig.1 page 6)



ΕN

# RF11912

E27 LAMP HOLDER










**SNOOPY** F6380030

# **RF11912**

E27 LAMP HOLDER

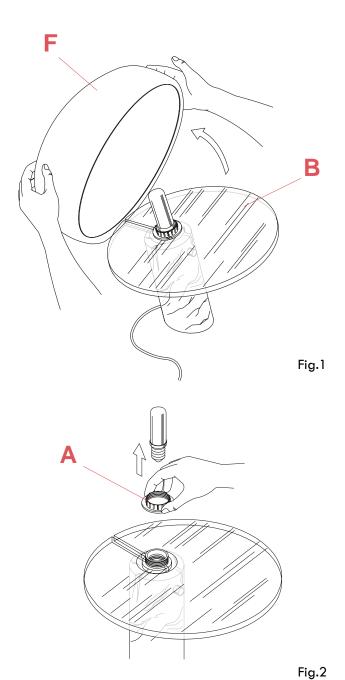

Remove the reflector (F) from the glass diffuser (B).


Remove the lamp-bulb and unfasten the locking ring nut (A).



ΕN

# RF11912

E27 LAMP HOLDER

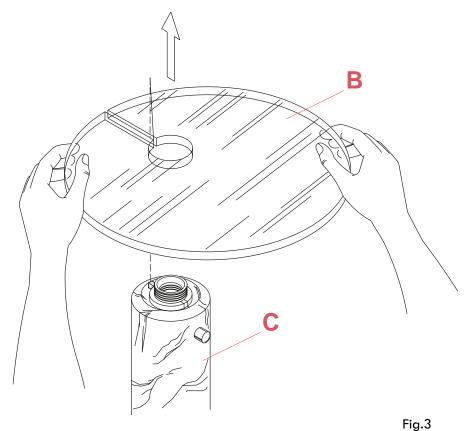

1 19.0

Delicately remove the glass diffuser (B) from the lamp body (C).

**SNOOPY** F6380030

## **RF11912**

E27 LAMP HOLDER

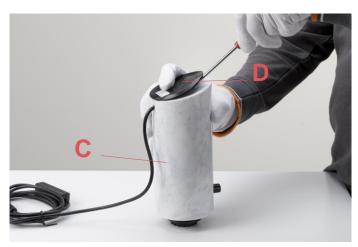


Fig.4

Turn upside down the lamp body (C) and remove the black base cover (D) by utilizing a flat screw driver.



Fig.5

By utilizing a tiny flat screw driver, carefully push towards the inside the side spring of the lamp holder in away to free the sleeve of the lamp holder.

ΕN

# RF11912

E27 LAMP HOLDER

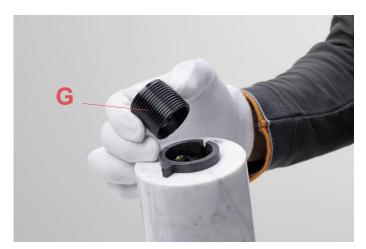


Fig.6



Fig.7

Remove the sleeve (G) from the lamp holder assembly by unfastening it.
Unfasten the locking screw (H) by utilizing an Allen key.

**SNOOPY** F6380030

### **RF11912**

**E27 LAMP HOLDER** 

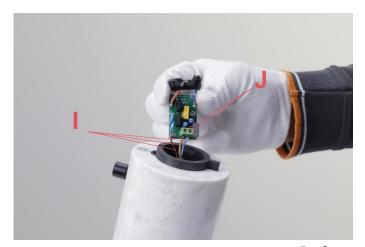


Fig.8

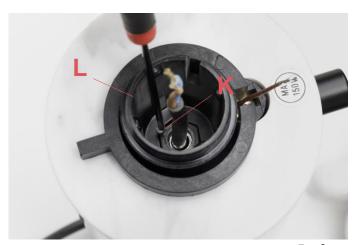


Fig.9

Lift up the lamp holder assembly with the touch dimmer (printed circuit board) from the lamp body and free the electrical cable assembly that needs to be replaced by disconnecting the electrical wires (I) through the terminals (J).

Unfasten the internal screw (K) of the lamp holder support (L).

Unfasten the lamp holder support (L) from the lamp body.

Assemble now the new spare-part:

Fasten the new lamp holder support (L) on the threaded pin inside the lamp body. Lock the lamp support (L) by fastening the internal screw (K).

Connect the electrical wires (I) to the touch dimmer by respecting the polarities indicated in correspondence of the connection terminal (J).

Connect the Brown (live) wire in the terminal indicated with "L" and then connect the Blue (neutral) wire in the other terminal indicated with "N".

Position back the lamp holder assembly onto the lamp body and fasten back the locking screw (H) by utilizing an Allen key.

Screw back-on the lamp holder the sleeve (G).

Turn upside down the lamp body (C) and place back the black base cover (D).

Place the glass diffuser (B) on the main body (C) ensuring that the groove (D) corresponds perfectly to the reference tooth (E).

Lock the glass diffuser (B) by fastening the locking nut (A) and insert the lamp-bulb.

Position the reflector (F) on the glass (B) ensuring that the anti-rotation tooth (G) is inserted in the groove of the glass diffuser.




#### ΕN

# RF11919

RING NUT



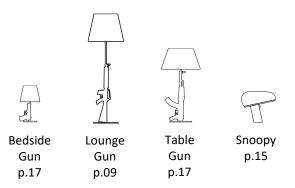




**SNOOPY** F6380030

# RF11919

RING NUT

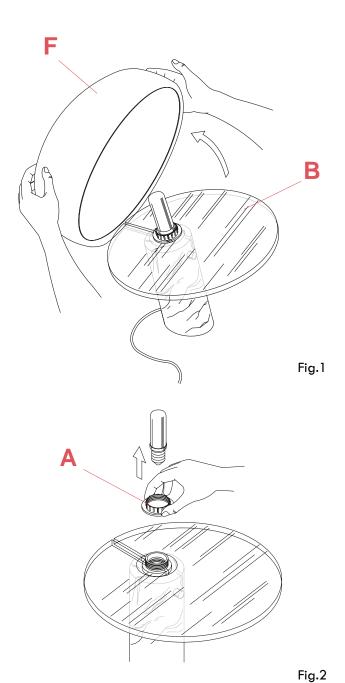

Remove the reflector (F) from the glass diffuser (B).

Remove the lamp-bulb and unfasten the locking ring nut (A).

### EN

## **RF11919**

RING NUT



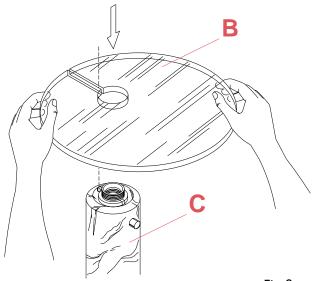


Fig.2



Lock the glass diffuser (B) by fastening the new locking nut (A) and insert the lamp-bulb.

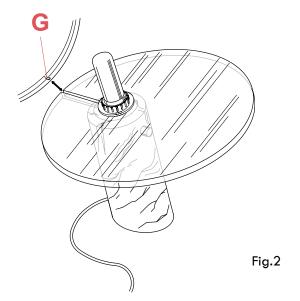


Position the reflector (F) (fig.1 page 15) on the glass (B) ensuring that the anti-rotation tooth (G) is inserted in the groove of the glass diffuser.



**SNOOPY** F6380030

# RF26254


**ELECTRONIC TOUCH DIMMER** 

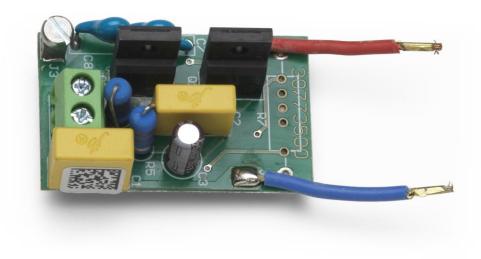

**SNOOPY** F6380030

## RF26254

**ELECTRONIC TOUCH DIMMER** 

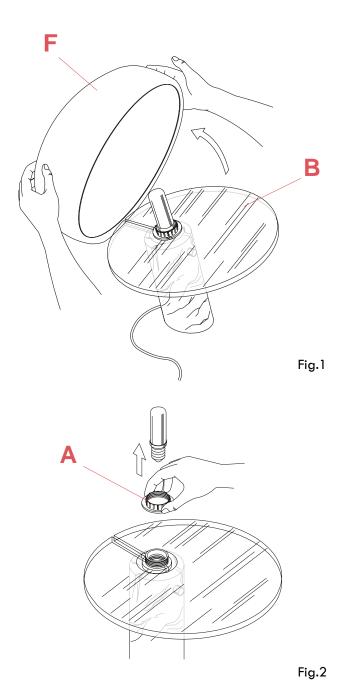


Remove the reflector (F) from the glass diffuser (B).

Remove the lamp-bulb and unfasten the locking ring nut (A).

**SNOOPY** F6380030

# RF26254

**ELECTRONIC TOUCH DIMMER** 

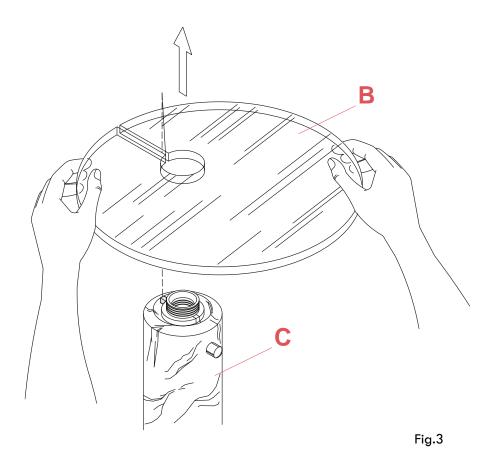

Delicately remove the glass diffuser (B) from the lamp body (C).

**SNOOPY** F6380030

## RF26254

**ELECTRONIC TOUCH DIMMER** 

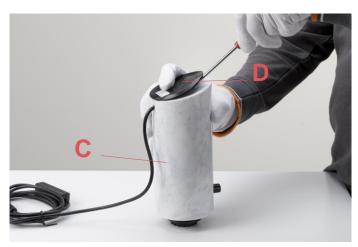


Fig.4

Turn upside down the lamp body (C) and remove the black base cover (D) by utilizing a flat screw driver.



Fig.5

By utilizing a tiny flat screw driver, carefully push towards the inside the side spring of the lamp holder in away to free the sleeve of the lamp holder.

**SNOOPY** F6380030

## RF26254

**ELECTRONIC TOUCH DIMMER** 

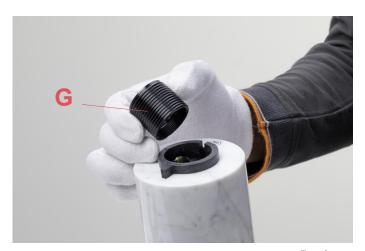


Fig.6



Fig.7

Remove the sleeve (G) from the lamp holder assembly by unfastening it.
Unfasten the locking screw (H) by utilizing an Allen key.

**SNOOPY** F6380030

### RF26254

#### **ELECTRONIC TOUCH DIMMER**

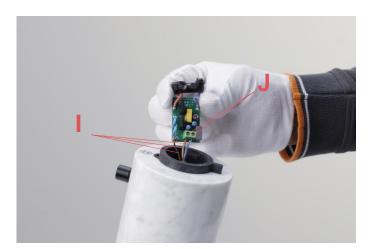


Fig.8

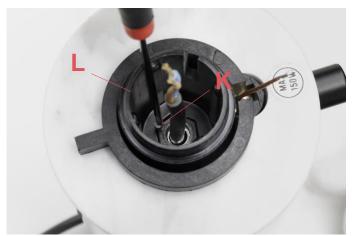


Fig.9

Lift up the lamp holder assembly with the touch dimmer (printed circuit board) from the lamp body and free the electrical cable assembly that needs to be replaced by disconnecting the electrical wires (I) through the terminals (J).

Assemble now the new spare-part:

Connect the electrical wires (I) to the touch dimmer by respecting the polarities indicated in correspondence of the connection terminal (J).

Connect the Brown (live) wire in the terminal indicated with "L" and then connect the Blue (neutral) wire in the other terminal indicated with "N".

Position back the lamp holder assembly onto the lamp body and fasten back the locking screw (H) by utilizing an Allen key.

Screw back-on the lamp holder the sleeve (G).

Turn upside down the lamp body (C) and place back the black base cover (D).

Place the glass diffuser (B) on the main body (C) ensuring that the groove (D) corresponds perfectly to the reference tooth (E).

Lock the glass diffuser (B) by fastening the locking nut (A) and insert the lamp-bulb.

Position the reflector (F) on the glass (B) ensuring that the anti-rotation tooth (G) is inserted in the groove of the glass diffuser.



#### EN

# RF12478

**ELECTRICAL ASSEMBLY WITH FUSE BOX** 



**SNOOPY** F6380030

# **RF12478**

### **ELECTRICAL ASSEMBLY WITH FUSE BOX**

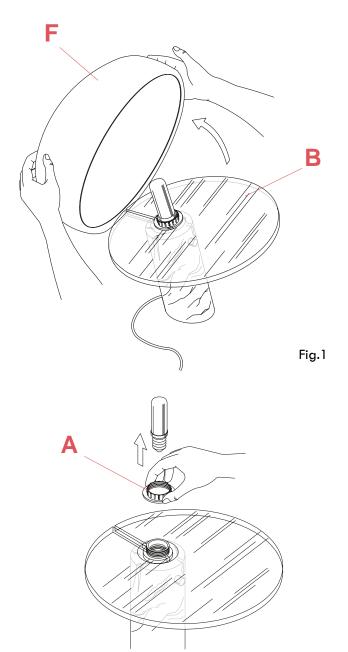


Fig.2

Remove the reflector (F) from the glass diffuser (B).

Remove the lamp-bulb and unfasten the locking ring nut (A).

**SNOOPY** F6380030

# **RF12478**

### **ELECTRICAL ASSEMBLY WITH FUSE BOX**

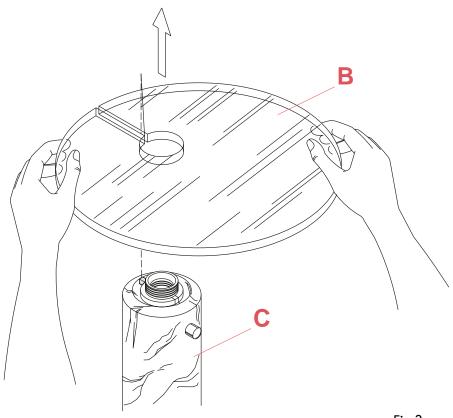


Fig.3

Delicately remove the glass diffuser (B) from the lamp body (C).

**SNOOPY** F6380030

## **RF12478**

#### **ELECTRICAL ASSEMBLY WITH FUSE BOX**

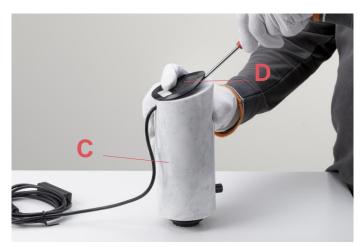


Fig.4

Turn upside down the lamp body (C) and remove the black base cover (D) by utilizing a flat screw driver.



Fig.5

By utilizing a tiny flat screw driver, carefully push towards the inside the side spring of the lamp holder in away to free the sleeve of the lamp holder.

**SNOOPY** F6380030

# **RF12478**

### **ELECTRICAL ASSEMBLY WITH FUSE BOX**

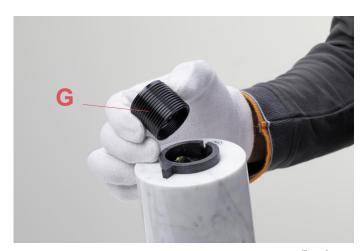


Fig.6

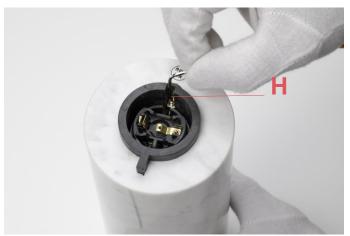


Fig.7

Remove the sleeve (G) from the lamp holder assembly by unfastening it.
Unfasten the locking screw (H) by utilizing an Allen key.

**SNOOPY** F6380030

## RF26254

**ELECTRONIC TOUCH DIMMER** 


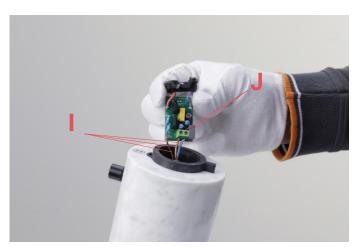


Fig.8

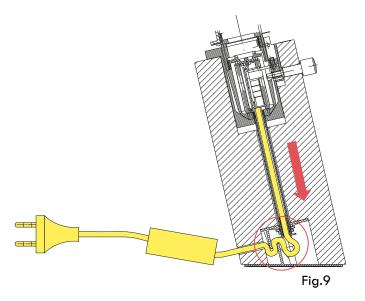

Lift up the lamp holder assembly with the touch dimmer (printed circuit board) from the lamp body and free the electrical cable assembly that needs to be replaced by disconnecting the electrical wires (I) through the terminals (J).

At this point remove the electrical cable assembly from the lamp body by pulling the cable from underneath the lamp body.

**SNOOPY** F6380030

### **RF12478**

#### **ELECTRICAL ASSEMBLY WITH FUSE BOX**

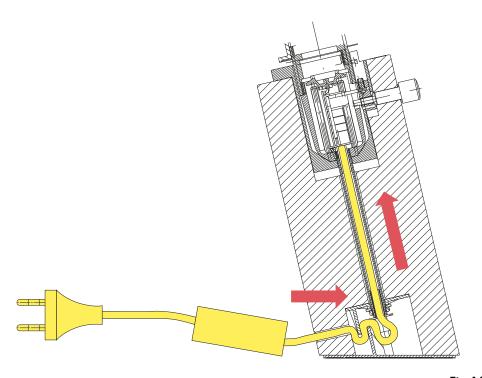


Fig.10

Assemble now the new spare-part:

Insert the new electrical assembly through the lamp body.

Connect the electrical wires (I) to the touch dimmer by respecting the polarities indicated in correspondence of the connection terminal (J).

Connect the Brown (live) wire in the terminal indicated with "L" and then connect the Blue (neutral) wire in the other terminal indicated with "N".

Position back the lamp holder assembly onto the lamp body and fasten back the locking screw (H) by utilizing an Allen key.

Screw back-on the lamp holder the sleeve (G).

Turn upside down the lamp body (C) and place back the black base cover (D).

Place the glass diffuser (B) on the main body (C) ensuring that the groove (D) corresponds perfectly to the reference tooth (E).

Lock the glass diffuser (B) by fastening the locking nut (A) and insert the lamp-bulb.

Position the reflector (F) on the glass (B) ensuring that the anti-rotation tooth (G) is inserted in the groove of the glass diffuser.