


Designed by Antonio Citterio and Toan Nguyen, 2003


F4651000





EN

F4651000

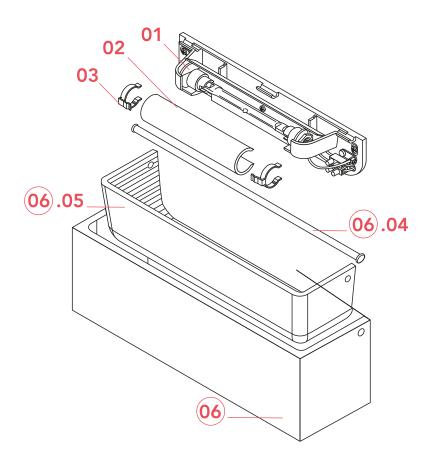

- 01. RF13559 R7S A10V cm25 half lampholder
- **02. RF11376** Curved sanded protection glass
- 03. RF06356 Nickel spring for curved protection glass
- **04. RF4651200** Rod assembly
- 05. RF13567 Internal white diffuser
- **06. RF4651100** Diffuser assembly



ONTHEROCKS HL F4651000

RF13559

RTS A10 cm 25 HALF LAMP HOLDER





ΕN

RF11376

CURVED SANDED PROTECTION GLASS



RF11376

CURVED SANDED PROTECTION GLASS

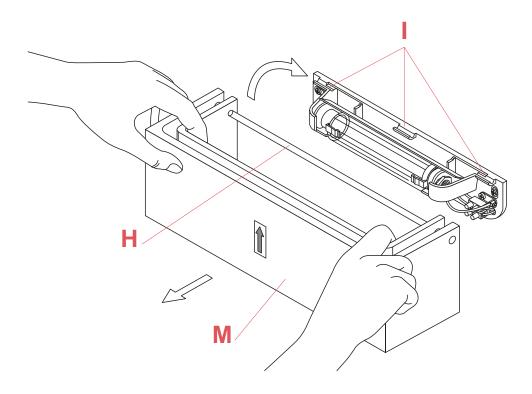


Fig.1

Remove the glass diffuser assembly (M) by unhooking the rod (H) from the seats (I).

ΕN

RF11376

CURVED SANDED PROTECTION GLASS

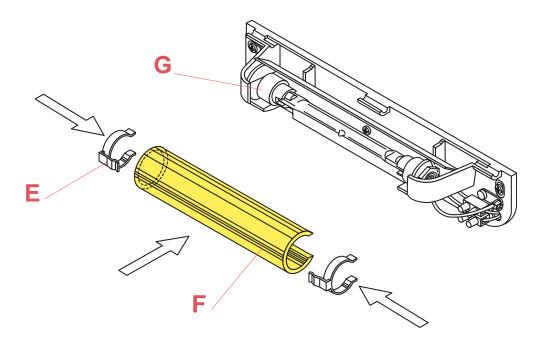



Fig.2

Collocate the spring clips (E) to the protection glass (F) and clip them on the lamp holder (G).

ONTHEROCKS HL F4651000

RF11376

CURVED SANDED PROTECTION GLASS

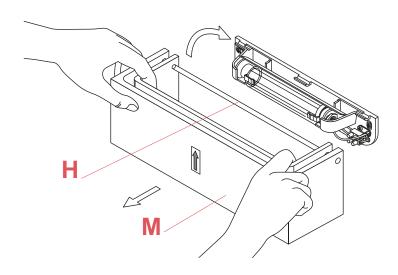

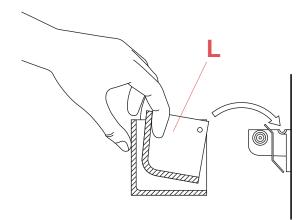


Fig.3

Collocate the diffuser assembly (M) on the wall attachment by resting the rod (H) in the appropriate seats (I).

Centre (balance) the internal white glass diffuser with the external transparent glass diffuser on the seats (I).



ONTHEROCKS HL F4651000

RF06356

NICKEL SPRING FOR THE CURVED PROTECTION GLASS



ΕN

RF06356

NICKEL SPRING FOR THE CURVED PROTECTION GLASS

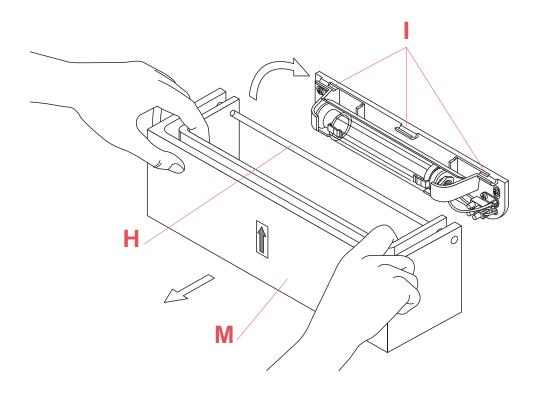


Fig.1

Remove the glass diffuser assembly (M) by unhooking the rod (H) from the seats (I).

ΕN

RF06356

NICKEL SPRING FOR THE CURVED PROTECTION GLASS

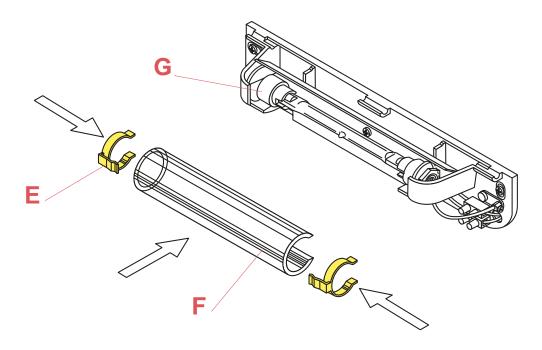



Fig.2

Collocate the spring clips (E) to the protection glass (F) and clip them on the lamp holder (G).

ONTHEROCKS HL F4651000

RF06356

NICKEL SPRING FOR THE CURVED PROTECTION GLASS

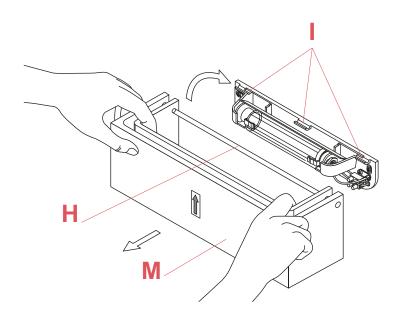

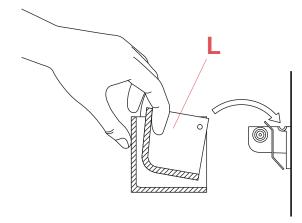


Fig.3

Collocate the diffuser assembly (M) on the wall attachment by resting the rod (H) in the appropriate seats (I).

Centre (balance) the internal white glass diffuser with the external transparent glass diffuser on the seats (I).



ΕN

RF4651200

ROD ASSEMBLY



ONTHEROCKS HL F4651000

RF4651200

ROD ASSEMBLY

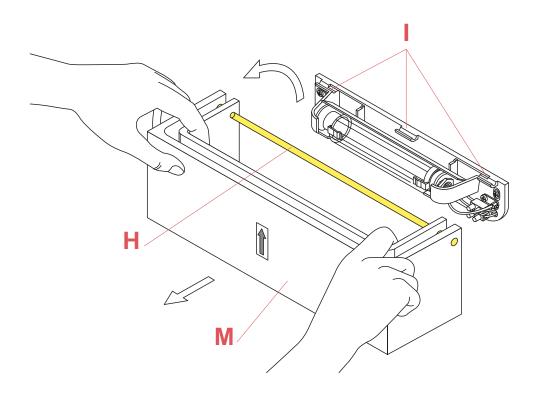


Fig.1

Remove the glass diffuser assembly (M) by unhooking the rod (H) from the seats (I).

ONTHEROCKS HL F4651000

RF4651200

ROD ASSEMBLY

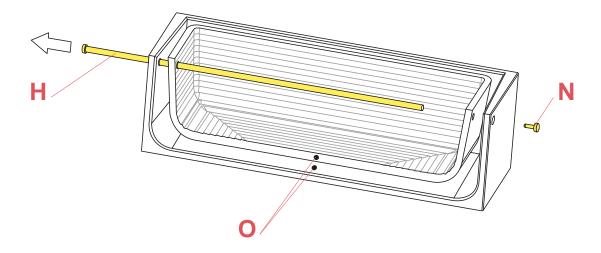


Fig.2

Remove the internal diffuser (O) by unfastening the screw (N) and by sliding-out the rod (H).


Assemble now the new spare-part:

Assemble the diffuser by inserting the rod (H) through the lateral holes and by tighten the screw (N) onto the end side of the rod (H).

ONTHEROCKS HL F4651000

RF4651200

ROD ASSEMBLY

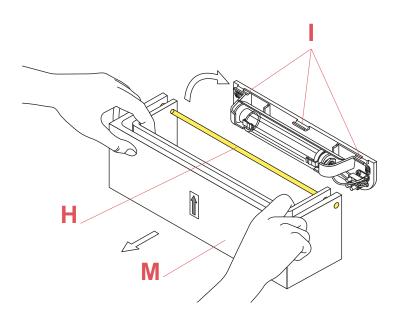

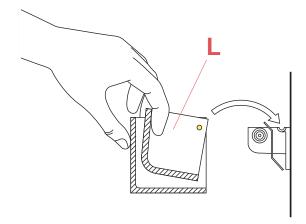


Fig.3

Collocate the diffuser assembly (M) on the wall attachment by resting the rod (H) in the appropriate seats (I).

Centre (balance) the internal white glass diffuser with the external transparent glass diffuser on the seats (I).



ONTHEROCKS HL F4651000

RF13567

ONTHEROCKS 1 HL INTERNAL WHITE DIFFUSER



ONTHEROCKS HL F4651000

RF13567

ONTHEROCKS 1 HL INTERNAL WHITE DIFFUSER

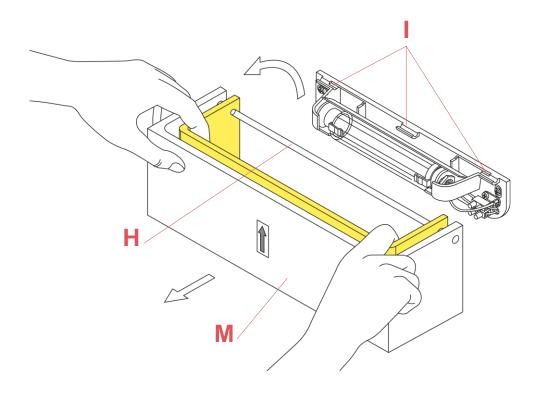


Fig.1

Remove the glass diffuser assembly (M) by unhooking the rod (H) from the seats (I).

ONTHEROCKS HL F4651000

RF13567

ONTHEROCKS 1 HL INTERNAL WHITE DIFFUSER

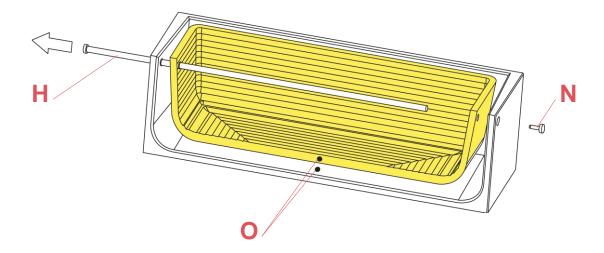


Fig.2

To remove the internal diffuser (O) it is necessary to unfasten the screw (N) and slide-out the rod (H).


Assemble now the new spare-part:

Assemble the diffusers by inserting the rod (H) through the lateral holes and by tighten the screw (N) onto the end side of the rod (H).

ONTHEROCKS HL F4651000

RF13567

ONTHEROCKS 1 HL INTERNAL WHITE DIFFUSER

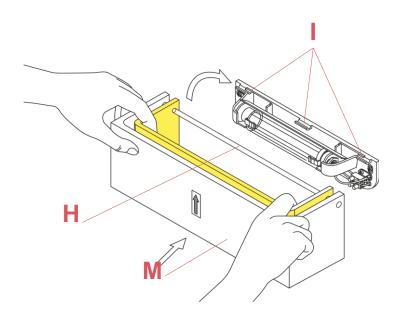

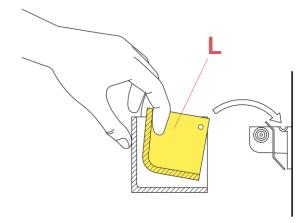


Fig.3

Collocate the diffuser assembly (M) on the wall attachment by resting the rod (H) in the appropriate seats (I).

Centre (balance) the internal white glass diffuser with the external transparent glass diffuser on the seats (I).



ONTHEROCKS HL F4651000

RF4651100


ONTHEROCKS 1 HL DIFFUSER ASSEMBLY



ONTHEROCKS HL F4651000

RF4651100

ONTHEROCKS 1 HL DIFFUSER ASSEMBLY

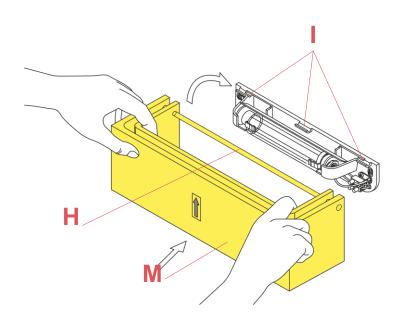

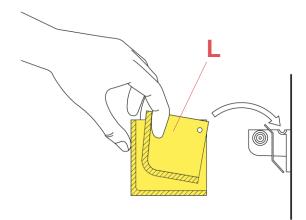


Fig.1

Collocate the diffuser on the wall attachment by resting the rod (H) in the appropriate seats (I) and by ensuring to respect the assembly direction as pointed out from the label (M). To facilitate such procedure, hold the internal diffuser (L) by lifting it up as indicated in the figure on the left hand side.

Once completed the assembly, remove the arrow label (M).