

## RF13990

External ring



## RF13990

External ring

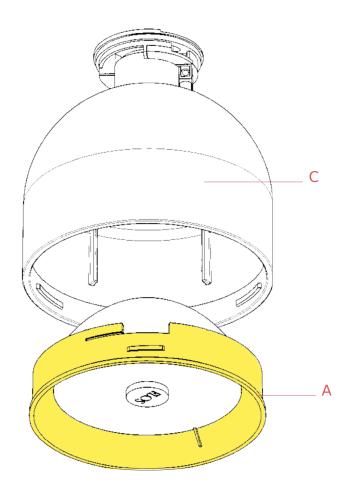


Fig.1

Remove the reflector/diffuser (A), unhooking it from the body (C) by slight rotating it anticlockwise.



## RF13990

External ring





Fig.2 Fig.3

Remove the Reflector (B) from the damaged external ring (D). Unlock the reflector (B) out from the safety locks (E).

## RF13990

#### External ring





Fig.4 Fig.5

Remove the glass diffuser (F) from the damaged external ring (D).

Assemble now the new spare-part:

Position the glass diffuser (F) on top of the external ring (D).



# RF13990

External ring



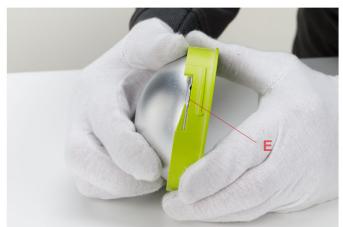


Fig.6 Fig.7

Position the reflector (B) on top of the external ring (D).

Lock the reflector (B) inside the safety lock system (E).

Assemble the reflector/diffuser assembly (A), by hooking it on the lamp body (C) rotating it clockwise. (Fig. 1 page 1).

## RF13990

External ring

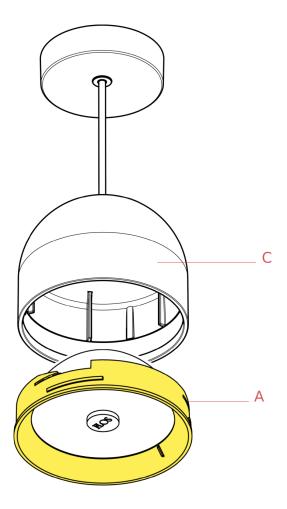


Fig.1

Remove the reflector/diffuser (A), unhooking it from the body (C) by slight rotating it anticlockwise.

## RF13990

External ring





Fig.2 Fig.3

Remove the Reflector (B) from the damaged external ring (D). Unlock the reflector (B) out from the safety locks (E).

## RF13990

#### External ring





Fig.4 Fig.5

Remove the glass diffuser (F) from the damaged external ring (D).

Assemble now the new spare-part:

Position the glass diffuser (F) on top of the external ring (D).

# RF13990

#### External ring



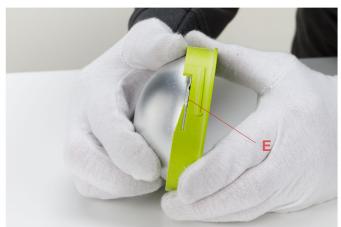


Fig.6 Fig.7

Position the reflector (B) on top of the external ring (D).

Lock the reflector (B) inside the safety lock system (E).

Assemble the reflector/diffuser assembly (A), by hooking it on the lamp body (C) rotating it clockwise. (Fig. 1 page 1).